How to update Komikan bootloader and firmware image

For Windows:

1.

Download tftp server application for windows: http://tftpd32.jounin.net/tftpd32_download.html

- Add static IP address on PC Ethernet port. Recommended IP address 192.168.1.254.
 NOTE could be any IP address from 192.168.1.x pool except 192.168.1.6 (This is device bootloader IP)
- 3. Boot up device, and hold **ESC** to enter bootloader via terminal.



- 4. Connect Komikan via Ethernet to PC
- 5. Open tfpd application, and go to Tftp Client. Host address is 192.168.1.6. Choose bootloader first.

🖻 rtl8197f_boot_tftp_v2.4.bin	2019-06-17 13:31	BIN File	64 KB

6. Press put tfpd application and bootloader will be updated automatically

	🔖 Tftpd64 by Ph.	Jounin		
	Current Directory	C:\Program Files\Tftpd64	1 🖵	Browse
	Server interfaces	127.0.0.1	Software L 💌	Show Dir
	Tftp Server Tftp	Client Log viewer	_	
	Host 192.168.	1.6 Port		
	Local File C:V	\Program Files\Tftpd64\Kc		
	Remote File			
	Block Default Size	-		
		Get Put	Break	
	1			
	About	Settings		Help
(ealTek> (ealTek> RealTek> "TFTP Client U	pload, File Name:	rtl8197f_boot_tftp_v2	.4.bin	
TFTP Client U	pload File Size =	0000FFC6 Bytes at A05	00000	
ccess! kealTek> grading: Boot ecksum Ok ! arn Addr =0x00	code 000000! srcAddr=0x	xa0500010 len =0x0000f:	£b6	
Lash Write Suc	cessed!			
ealTek>				
ooting				
Lboot v2.4 (R: tp://www.8dev:	TL8197F) ices.com/			

7. Enter bootloader again, and now upload firmware. Firmware will be upgraded automatically

