



MPF42791

2 to 16 Stacked Cells Battery Pack Fuel Gauge with Resistance Detection and Thermal Model

DESCRIPTION

The MPF42791 is a drop-in solution to provide comprehensive status information on lithium-ion battery strings up to 16 series cells. The MPF42791 estimates the internal state-of-charge (SOC) and state-of-health (SOH) for each cell, as well as the full pack. The MPF42791 also determines impedance, remaining runtime, charge time, and instantaneous available power. On-board memory enables the lifetime logging of key parameters.

The MPF42791 is simple to use and supports a variety of lithium cell chemistries and cell sizes. A few basic configurations allow for quick set-up, and advanced configuration capabilities can fine-tune the device for specific applications.

When paired with an MP279x battery monitor, the MPF42791 can achieve SOC accuracy within 2.5% across the temperature range. The MPF42791 can also be paired with other analog front-end (AFE) or battery stack monitors. The 400kHz I²C interface provides standard, robust communication. The 5-level LED drivers provide a simple, cost-effective charge level indicator for the device.

The MPF42791 is available in a TQFN-32 (4mmx4mm) package.

MINIMUM SYSTEM REQUIREMENTS

- BMS AFE Providing Individual Cell Voltages, Pack Currents, and Temperatures
- M0 System MCU with I²C and Interrupt, 48KB of Flash and 4KB of RAM

FEATURES

- Compatible with Commonly Used Battery Monitors for Up to 16 Series Cells
 - ±2.5% State-of-Charge (SOC) Accuracy when Paired with MP279x Battery Monitors
- Provides Critical Battery Information:
 - Pack and Cell SOC
 - Pack and Cell State-of-Health (SOH)
 - Remaining Runtime and Charge Time
 - Instantaneous Available Power
- Supports a Wide Variety of Lithium Cells
- Adaptive Learning Can Be Enabled to:
 - Refine Initial Charge Settings
 - Refine Initial Discharge Settings
 - Update Individual Cells' State-of-Health (SOH) to Track Degradation
 - Update Equivalent Series Resistance (ESR) to Track Degradation
- Provides Lifetime Logging
- Supports 5-Level LED SOC Indicator with Push-Button Trigger
- 2.5V Minimum Supply Voltage
- Low Current Consumption: 6µA in Disabled Mode and 135µA (Average) in Operating Mode during Rest
- Supports Up to 400kHz I²C with CRC for Robust Communication
- Available in a Compact TQFN-32 (4mmx4mm) Package
- Available in Turn-Key MPS BMS Module:
 - MBM1xS-P50-B and MBM1xS-P100-B

APPLICATIONS

- Light EVs: Scooters, Bikes, and Golf Carts
- Energy Storage: Uninterruptable Power Supplies (UPS) and Renewable Energy
- Industrial Robots, Floor Cleaners, and Forklifts
- Cordless Tools and Gardening Equipment

All MPS parts are lead-free, halogen-free, and adhere to the RoHS directive. For MPS green status, please visit the MPS website under Quality Assurance. "MPS", the MPS logo, and "Simple, Easy Solutions" are trademarks of Monolithic Power Systems, Inc. or its subsidiaries.

TYPICAL APPLICATION

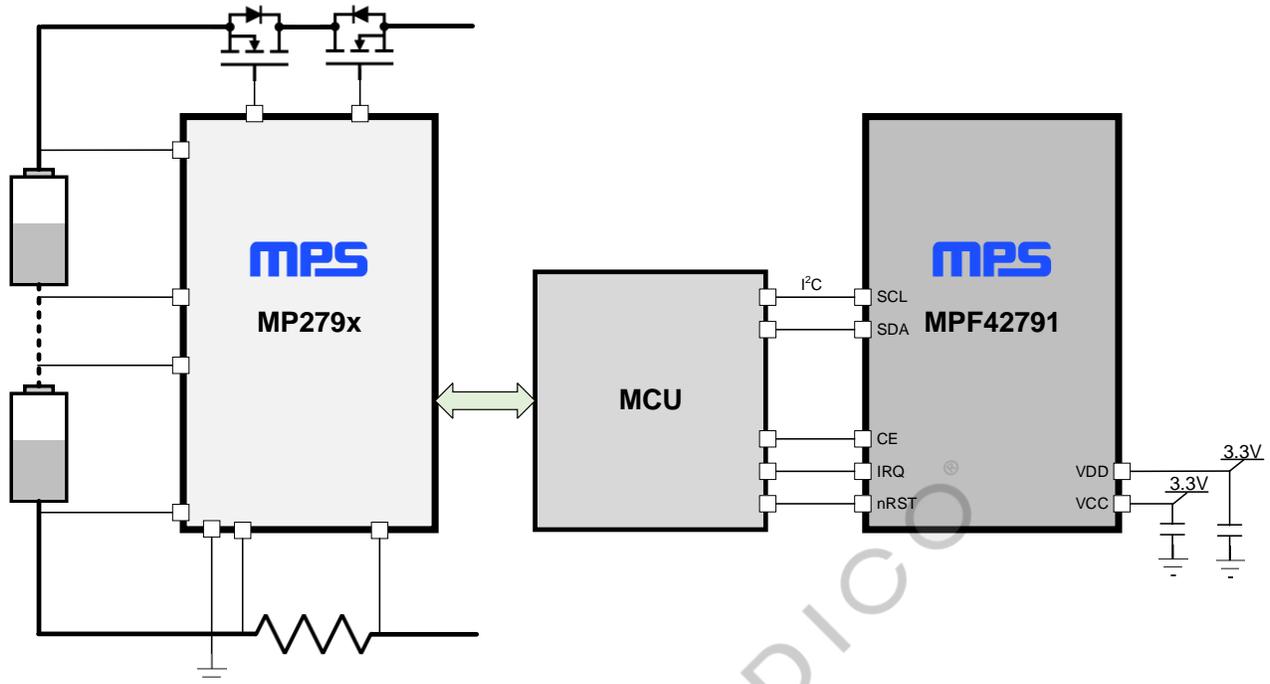


Figure 1: MPF42791 with MP279x AFE Typical Electrical Diagram

provided by CODICOR

ORDERING INFORMATION

Part Number*	Package	Top Marking	MSL Rating
MPF42791DRT-0B-yyyy**	TQFN-32 (4mmx4mm)	See Below	3
EVKT_MPF42791	Evaluation kit	-	-
EVKT-MBM16S-P50-B	Evaluation kit	-	-

* For Tape & Reel, add suffix -Z (e.g. MPF42791DRT-0B-yyyy-Z).

** “-yyyy” refers to the default configuration identifier (“-0000” by default), where each “y” is a hexadecimal value between 0 and F. Work with an MPS FAE to obtain a customized default configuration.

TOP MARKING

MPSYWW
M4279X
LLLLLL

MPF4279X Family generic version

MPS: MPS prefix
 Y: Year code
 WW: Week code
 M4279X: Family part number*
 LLLLLL: Lot number

* The specific part number is in the IC_VER register.

EVALUATION KITS EVKT-MBM1XS-P50-B (MP279X BMS)

EVKT-MBM16S-P50-B

EVKT-MBM16S-P50-B kit contents (items below can be ordered separately):

#	Part Number	Item	Quantity
1	MBM16S-P50-B	MPF42791DRT-0B-0001 and MP2797DFP-0001 reference design and evaluation board	1
2	EVKT-USB_RS232/I2C-01	USB to RS232 / I ² C adapter	1
3	Online resources	Include datasheet, user guide, product brief, and GUI	1

EVKT-MBM14S-P50-B

EVKT-MBM14S-P50-B kit contents (items below can be ordered separately):

#	Part Number	Item	Quantity
1	MBM14S-P50-B	MPF42791DRT-0B-0001 and MP2791DFP-0001 reference design and evaluation board	1
2	EVKT-USB_RS232/I2C-01	USB to RS232 / I ² C adapter	1
3	Online resources	Include datasheet, user guide, product brief, and GUI	1

Order directly from MonolithicPower.com or our distributors.


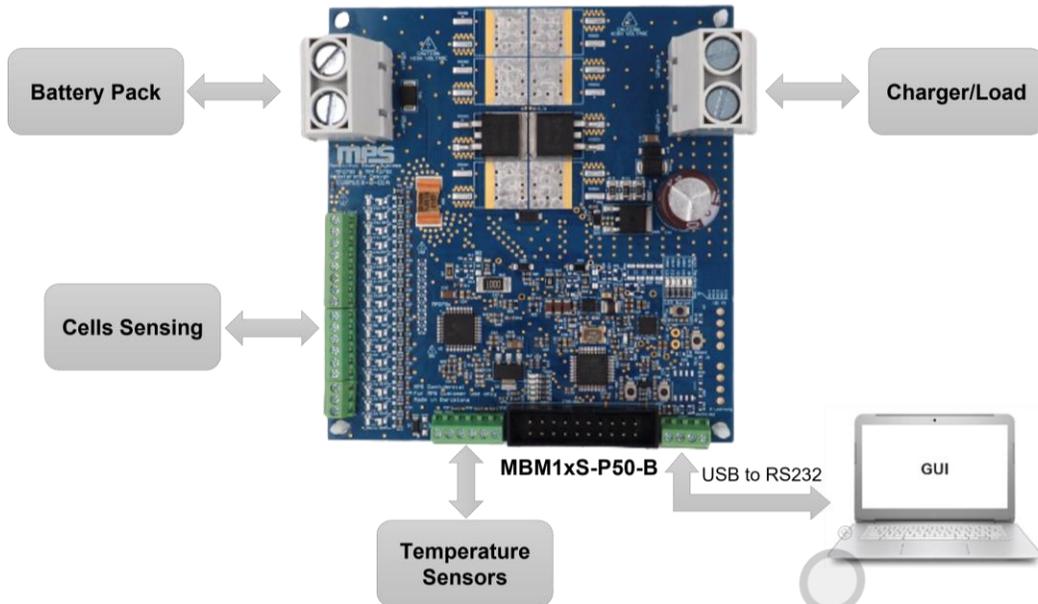


Figure 2: MBM1xS-P50-B Evaluation Kit Set-Up

PACKAGE REFERENCE

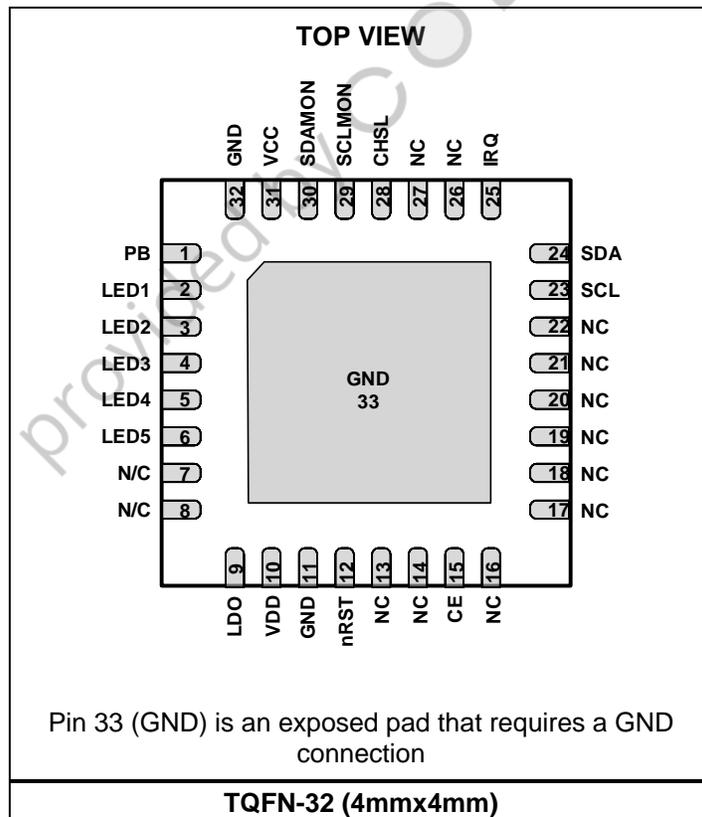

PIN FUNCTIONS

Pin #	Name	I/O	Description
1	PB	I	Push-button. Triggers state-of-charge (SOC) LED indicator.
2	LED1	O	LED 1 driver. The LED1 pin reports the SOC with a 330Ω resistor in series.
3	LED2	O	LED 2 driver. The LED2 pin reports the SOC with a 330Ω resistor in series.
4	LED3	O	LED 3 driver. The LED3 pin reports the SOC with a 330Ω resistor in series.
5	LED4	O	LED 4 driver. The LED4 pin reports the SOC with a 330Ω resistor in series.
6	LED5	O	LED 5 driver. The LED5 pin reports the SOC with a 330Ω resistor in series.
7	NC	-	No connection.
8	NC	-	No connection.
9	LDO	Power	Internal LDO. Bypass the LDO pin with a 2.2μF + 100nF ceramic capacitor connected to ground.
10	VDD	Power	Power supply input. Bypass VDD with a 2.2μF ceramic capacitor connected to ground.
11	GND	Power	Ground pin.
12	nRST	I	IC reset control.
13	NC	-	No connection.
14	NC	-	No connection.
15	CE	I	Chip enabled. Set the CE pin to stop fuel gauge updates and disable the communication interface to minimize current consumption.
16	NC	-	No connection.
17	NC	-	No connection.
18	NC	-	No connection.
19	NC	-	No connection.
20	NC	-	No connection.
21	NC	-	No connection.
22	NC	-	No connection.
23	SCL	I/O	I²C interface clock. Connect the SCL pin to the logic rail through a 10kΩ resistor.
24	SDA	I/O	I²C interface data. Connect the SDA pin to the logic rail through a 10kΩ resistor.
25	IRQ	O	Interrupt request pin. The IRQ pin is the interrupt going to the host system(s).
26	NC	-	No connection.
27	NC	-	No connection.
28	CHSL	I	Channel selection. The CHSL pin selects which I ² C channel is capable of writing data into the fuel gauge memory. Pull CHSL high to write data using the secondary I ² C.
29	SCLMON	I/O	Secondary I²C interface clock. Connect the SCLMON pin to the logic rail through a 10kΩ resistor.
30	SDAMON	I/O	Secondary I²C interface data. Connect the SDAMON pin to the logic rail through a 10kΩ resistor.
31	VCC	Power	3V to 3.3V power supply input. Bypass the VCC pin with a 2.2μF ceramic capacitor connected to ground.
32	GND	Power	Ground pin.
33	GND	Power	Ground pin.

ABSOLUTE MAXIMUM RATINGS ⁽¹⁾

VCC supply voltage (V _{CC})	3.6V
VDD supply voltage (V _{DD})	3.6V
nRST pin.....	-0.3V to +3.6V
All other pins	-0.3V to V _{CC} + 0.3V
Total power dissipation (T _A = 25°C) ⁽²⁾	500mW
.....	500mW
Storage temperature	-55°C to +150°C
Junction temperature	-55°C to +150°C

ESD Ratings

Human body model (HBM)

.....	±4000V
-------	--------

Recommended Operating Conditions ⁽³⁾

Supply voltage (V _{DD})	3V to 3.6V
All other pins	-0.3V to V _{CC} + 0.3V
Operating junction temp (T _J)	-40°C to +85°C

Thermal Resistance ⁽⁴⁾	θ_{JA}	θ_{JC}
TQFN-32 (4mmx4mm).....	47.....	4.5...°C/W

Notes:

- 1) Exceeding these ratings may damage the device.
- 2) The maximum allowable power dissipation is a function of the maximum junction temperature, T_J (MAX), the junction-to-ambient thermal resistance, θ_{JA}, and the ambient temperature, T_A. The maximum allowable continuous power dissipation at any ambient temperature is calculated by P_D (MAX) = (T_J (MAX) - T_A) / θ_{JA}. Exceeding the maximum allowable power dissipation can produce an excessive die temperature, and the regulator may go into thermal shutdown. Internal thermal shutdown circuitry protects the device from permanent damage.
- 3) The device is not guaranteed to function outside of its operating conditions.
- 4) Measured on JESD51-7, 4-layer PCB.

provided by CODICO

ELECTRICAL CHARACTERISTICS

$V_{CC} = 3.3V$, $T_A = 25^\circ C$, unless otherwise noted.

Parameters	Symbol	Condition	Min	Typ	Max	Units
State-of-Charge (SOC) Performance						
Pack state-of-charge (SOC) accuracy ⁽⁵⁾	θ_{ERR}	MPS MP279x AFE family, $15^\circ C \leq T_A \leq 35^\circ C$, $I_{CHG} \leq 0.5C$, $I_{DIS} \leq 0.5C$	-2	0	+2	%
		MPS MP279x AFE family, $10^\circ C \leq T_A \leq 50^\circ C$, $I_{CHG} \leq 1C$, $I_{DIS} \leq 1C$	-3	0	+3	%
		MPS MP279x AFE family, $10^\circ C \leq T_A \leq 50^\circ C$, $I_{CHG} \leq 2C$, $I_{DIS} \leq 2C$	-4	0	+4	%
Power Supply						
VDD operating voltage range	V_{DD}		2.5	3.3	3.6	V
VCC operating voltage range	V_{CC}		2.5	3.3	3.6	V
Total active current	I_{DD_ACTIVE}	$V_{DD} = 3.3V$, LEDs off, fuel gauge updating		4.3		mA
Total standby current	$I_{DD_STANDBY}$	$V_{DD} = 3.3V$, LEDs off, fuel gauge idle		50		μA
Average operating current during CHG or DSG	$I_{DD_CHG/DSG}$	$V_{DD} = 3.3V$, LEDs off, EXE_TIME = 4s, NCELLS_SER = 10, with I ² C traffic		476		μA
Average operating current during rest	I_{DD_REST}	$V_{DD} = 3.3V$, LEDs off, NCELLS_SER = 10, EXE_TIME = 4s, WEXE_TIME_REST = 4, with I ² C traffic		192		μA
Total disabled current	I_{DD_DIS}	$V_{DD} = 3.3V$		6		μA
Power-On Reset (POR)						
Release threshold of POR	V_{ROT}	V_{DD} rising	1.66	1.79	1.9	V
nRST Pin						
nRST pin threshold voltage	V_{RST}		$0.2 \times V_{DD}$		$0.9 \times V_{DD}$	V
Minimum pulse width on nRST pin	t_{RST}	$V_{DD} = 3.3V$		700		ns
Timeout after reset	t_{TOUT}			64	128	ms
CE						
Low input voltage	V_{OL_CE}	$I_{OL} = 5mA$	-0.3		$0.35 \times V_{DD}$	V
High input voltage	V_{OH_CE}		$0.65 \times V_{DD}$		$0.3V + V_{DD}$	V
Low leakage current	$I_{CE_LKG_LOW}$	$V_{CE} = 3.3V$			3	μA
High leakage current	$I_{CE_LKG_HIGH}$	$V_{CE} = 3.3V$			3	μA
IRQ						
Low output voltage	V_{IRQL}	Sink = 4mA			0.4	V
High output voltage	V_{IRQH}	Source = 4mA	$V_{DD} - 0.4$			V
PB						
Low input voltage	V_{PBL}		-0.3		$0.35 \times V_{DD}$	V
High input voltage	V_{PBH}		$0.65 \times V_{DD}$		$0.3V + V_{DD}$	V
CHSL						
Low input voltage	V_{PBL}		-0.3		$0.35 \times V_{DD}$	V
High input voltage	V_{PBH}		$0.65 \times V_{DD}$		$0.3V + V_{DD}$	V

ELECTRICAL CHARACTERISTICS *(continued)*

$V_{DD} = 3.3V$, $T_A = 25^\circ C$, unless otherwise noted.

Parameters	Symbol	Condition	Min	Typ	Max	Units
LEDs						
High-level output voltage	V_{OH_LED}	Output current = 4 mA	$V_{DD} - 0.4V$			V
High-level output current	I_{OH_LED}	$V_{LEDx} = V_{DD} - 0.4V$	4			mA
I²C DC Characteristics						
High input voltage	V_{IH}	SCL, SDA	$0.7 \times V_{DD}$		$0.3V + V_{DD}$	V
Low input voltage	V_{IL}	SCL, SDA	-0.5		$0.3 \times V_{DD}$	V
Low output voltage	V_{OL}	SDA, sink current = 3mA			0.4	V
I²C Timing Characteristics						
Spikes suppressed by input filter	t_{SP}		0		50	ns
Operating frequency range	f_{SCL}				400	kHz
SCL clock low period	t_{LOW}		1.125			μs
SCL clock high period	t_{HIGH}		1.125			μs
SCL and SDA falling time	t_{FALL}				0.34	μs
SCL and SDA rising time	t_{RISE}				0.34	μs
Data hold time	t_{HD_DAT}		0			ns
Data set-up time	t_{SU_DAT}		125			ns
Data valid time	t_{V_DAT}		475			ns
Set-up time for a repeated start condition	t_{SU_STA}		125			ns
Hold time for a repeated start condition	t_{HD_STA}		0			ns
Set-up time for a stop condition	t_{SU_STO}		125			ns

Note:

- 5) Validated on a 10S1P Samsung INR18650 25R pack (see the Typical Performance Characteristics section on page 9 for more details). Similar results can be achieved with other cell/pack types after characterization.

TYPICAL PERFORMANCE CHARACTERISTICS

The MPF42791 fuel gauge performance depends on multiple factors, such as the accuracy of the measurements, the correctness of the configuration, and the fidelity of the cell mathematical model. This means that fuel gauge performance may vary depending on the battery operating conditions.

This section shows examples of the MPS MPF42791 fuel gauge pack's SOC performance when paired with MPS's MP279x AFE family.

Constant-Current/Constant-Voltage (CC/CV) Charge and Dynamic Discharge Cycle

The next scenarios consist of charging a 10S1P ⁽⁶⁾ battery using the typical CC/CV method, followed by a highly dynamic discharge at different ambient temperatures. The charge constant current rate is 1C, while the charge termination current in this example is 0.1C. The highly dynamic discharge corresponds to a typical e-bike's current profile, with an average current of 1C and maximum peak currents up to 2.8C. Figure 3 shows the current profile of the complete cycle at 25°C.

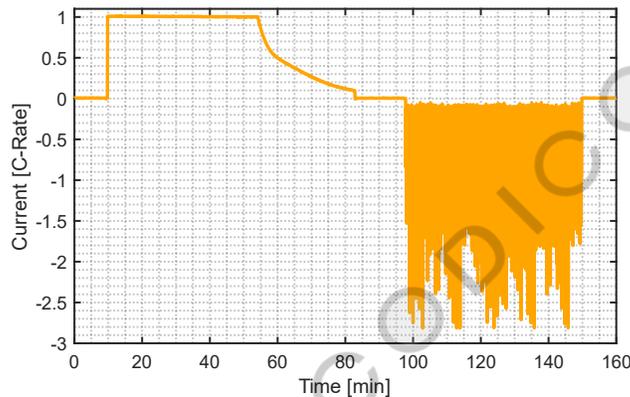


Figure 3: CC/CV Charge and Dynamic Discharge Current Profile

Figure 4 shows the MPF42791's performance for the CC/CV charge and dynamic discharge cycle at an ambient temperature of 25°C. During charge, the root-mean-squared ⁽⁷⁾ and maximum pack SOC error are 0.61% and 1.03%, respectively. During discharge, the root-mean-squared and pack SOC error are 0.78% and 1.94%, respectively.

Notes:

6) 10S1P refers to the battery configuration. There are 10 groups of 1 parallel cell connected in series.

7) The RMS error is equal to $\sqrt{\frac{\sum_{n=1}^N (\theta_n - \hat{\theta}_n)^2}{N}}$, where θ is the actual SOC, $\hat{\theta}$ is the estimated SOC, and N is the number of samples.

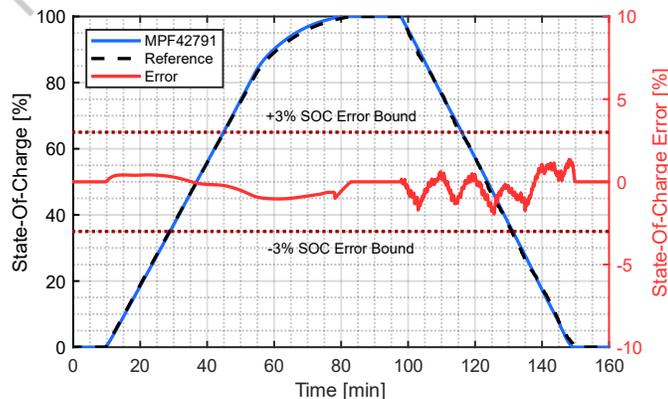


Figure 4: MPF42791 Performance for a CC/CV Charge and Dynamic Discharge (Ambient Temperature = 25°C)

Figure 5 shows the MPF42791’s performance for the CC/CV charge and dynamic discharge cycle at an ambient temperature of 0°C. During charge, the root-mean-squared and maximum pack SOC error are 0.68% and 1.22%, respectively. During discharge, the root-mean-squared and pack SOC error are 1.15% and 2.97%, respectively.

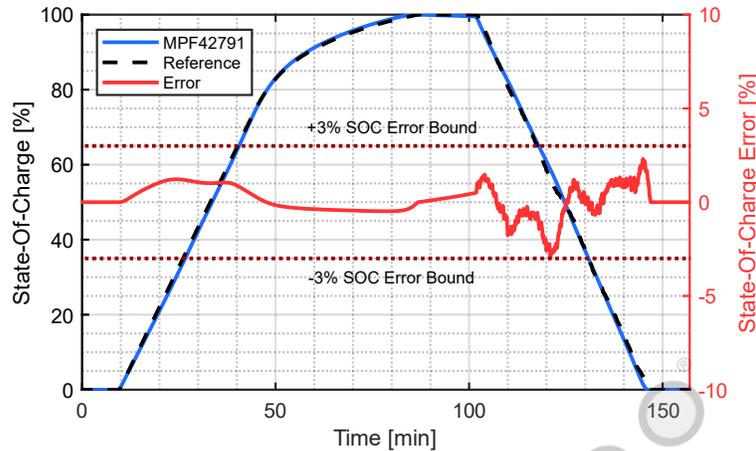


Figure 5: MPF42791 Performance for a CC/CV Charge and Dynamic Discharge (Ambient Temperature = 0°C)

Figure 6 shows the MPF42791’s performance for the CC/CV charge and dynamic discharge cycle at 40°C ambient temperature. During charge, the root-mean-squared and maximum pack SOC error are 0.40% and 0.60%, respectively. During discharge, the root-mean-squared and pack SOC error are 0.77% and 1.89%, respectively.

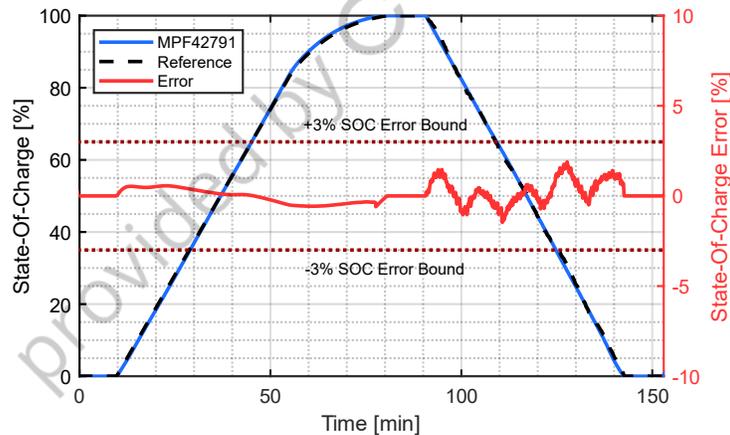


Figure 6: MPF42791 Performance for a CC/CV Charge and Dynamic Discharge (Ambient Temperature = 40°C)

Performance Summary

This section provides a summary of the MPF42791’s real-world performance. Table 2 **Error! Reference source not found.** shows a summary of the pack SOC performance metrics for a 10S1P battery.

Table 2: MPF42791 SOC Root-Mean-Squared (and Maximum) Error

Test Case	0°C	25°C	40°C
CC/CV charge	0.68% (1.22%)	0.61% (1.03%)	0.40% (0.60%)
Dynamic discharge	1.15% (2.97%)	0.78% (1.94%)	0.77% (1.89%)

OPERATION

The MPF42791 relies on a host microcontroller (MCU) to periodically update the fuel gauge's required inputs. This includes the cell voltages (via the VRDG_CELLxx registers), current (via the IRDG_CELLxx registers), and temperature (via the TRDG_TSx registers).

The host MCU is responsible for synchronizing the input data to the fuel gauge's execution time (EXE_TIME). The host MCU sends the EXE_CMD command to trigger the fuel gauge execution and waits until the iteration is completed (FG_EXE_FLAG = 0). Then the host MCU can read back the fuel gauge's output registers, such as the pack state-of-charge (SOC). The interrupt request (IRQ) pin can be configured to notify several events, such as a completed iteration or other conditions (see the xx_INTR_EN registers starting on page 56 for details).

Operating Modes

Active

In active mode, the fuel gauge is either updating the battery internal states or communicating via the I²C bus.

Standby

In standby mode, the fuel gauge is idle, which means that all triggered updates have been completed and the fuel gauge is waiting for activity on the SDA line to transition to active mode. See the I²C Communication Interface section on page 12 for more details.

Disabled

In disabled mode, the chip enable (CE) pin is low. I²C communication is not available, and the fuel gauge achieves minimal current consumption but still retains all internal state variables in its memory.

Configuration and Data Exchange

Configuration Mode

In the configuration mode, the MPF42791 is set to receive configuration parameters. However, the device will stop operating. This mode is enabled by sending the CONFIG_MODE_CMD and can be confirmed by reading the CONFIG_MODE_FLAG register. After the fuel gauge configurations are successfully updated, the host system must send the

CONFIG_EXIT_CMD command to save the configuration into non-volatile memory (NVM). This ensures that the configuration remains after a hardware reset (cycling the device's power or cycling power on the nRST pin).

Editing Mode

As an alternative to the configuration mode, the edit mode allows for partial configuration changes. In this mode, the fuel gauge settings can be updated, but not changes to the fuel gauge cell model. Configuration mode is required to change the fuel gauge cell model.

In this mode, the fuel gauge operation does not stop, which allows for on-the-fly configurations. This mode is enabled by sending the EDIT_CONFIG_CMD command and can be confirmed by reading the EDIT_SETTINGS_FLAG. The host system can exit this mode by sending the END_EDIT_CONFIG_CMD or CONFIG_EXIT_CMD command, which store the updated configuration in the MPF42791's NVM.

LED Control

The MPF42791 can drive five external LEDs that report the pack SOC. There are 2 methods for controlling the LEDs, direct control or manual control, which is configured using the LEDS_ON_MAN register.

Note that the LED settings can be written at any time during active or standby operating modes without having to enter configuration or edit modes.

Direct Control

With direct LED control, the fuel gauge directly controls the LEDs based on the pack SOC (see Table 1 on page 12). When the PB pin is pulled low (if the LEDS_ON_BTN register is enabled), or when the battery pack is charging (if LEDS_ON_CHG is enabled), the LEDs display pack SOC. The deglitch time between charge and discharge can be configured via the LED_TRANS register. The LED turn-on time can be configured via the LEDS_ON_TIME register.

Table 1: LED State-of-Charge Indicator Map

Pack SOC	LED Status				
	1	2	4	4	5
SOC > 90%	On	On	On	On	On
90% ≥ SOC > 70%	On	On	On	On	Off
70% ≥ SOC > 50%	On	On	On	Off	Off
50% ≥ SOC > 30%	On	On	Off	Off	Off
30% ≥ SOC > 10%	On	Off	Off	Off	Off
10% ≥ SOC	Off	Off	Off	Off	Off

Manual LED Control

With manual LED control, the host manually controls each LED via the corresponding LEDx_ON register.

I²C COMMUNICATION INTERFACE

The MPF42791 has two I²C-compatible interfaces. The primary I²C channel communicates with the host MCU which extracts the data from the AFE. The secondary I²C channel is designed to monitor the fuel gauge status in real time and configure the fuel gauge using the MPF4279x graphic user interface (GUI). Note that write operations are only accepted from one channel at a time (the primary channel by default). To write to the fuel gauge using the secondary I²C channel, the CHSL pin must be pulled high; otherwise, write operations from this channel are ignored.


The I²C is a bidirectional, two-wire serial interface. Only two bus lines are required: a serial data line (SDA) and a serial clock line (SCL). The device can be considered a master or a slave when performing data transfers. A device that initiates a data transfer on the bus and generates the clock signals to permit the transfer is considered a master. Any device that the master addresses is considered a slave.

Both MPF42791 I²C interfaces operate as slave devices with a configurable address (0x08 by default). They receive control inputs from the master device and ignore general call addresses.


The I²C interface supports both standard mode (up to 100kbits), and fast mode (up to 400kbits). The SDA and SCL lines are bidirectional with open drain outputs that should be connected to the positive supply voltage via a current source

or pull-up resistor. When the bus is free, both lines are high.

The data on the SDA line must be stable during the high period of the clock. The high or low state of the data line can only change when the clock signal on the SCL line is low. Note that a single clock pulse is generated for each data bit transferred (see Figure 7).

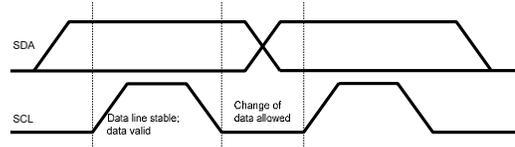
Figure 7: Bit Transfer on the I²C Bus

All transactions must begin with a start (S) command and can be terminated with a stop (P) command. Start and stop commands are always generated by the master. A start command is defined by a high-to-low transition on the SDA line while SCL is high (see Figure 8). A stop command is defined by a low-to-high transition on the SDA line while the SCL is high (see Figure 8). The bus is considered busy after a start command and free after a stop command.

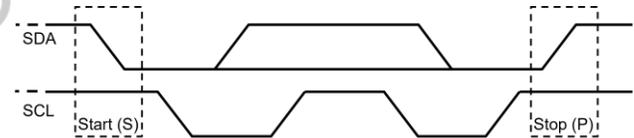
Figure 8: I²C Start (S) and Stop (P) Commands

Every byte on the SDA line must be 8 bits long and must be followed by an acknowledge bit (ACK). Note that data is transferred with the most significant bit (MSB) first.

A slave cannot receive or transmit a complete byte of data while performing other tasks, but it can hold the SCL line low to force the master into a wait state (clock stretching). Then, when the slave is ready, data transfer continues, and the clock line (SCL) is released. Figure 9 shows a complete data transfer.

The acknowledgement takes place after every byte and allows the receiver to signal to the transmitter that the byte was successfully received. All clock pulses are generated by the master, including the 9th clock pulse (ACK).

The transmitter releases the SDA line during the ACK clock pulse so that the receiver pulls the

SDA line low. If the SDA line remains high during the acknowledge clock pulse, it is not acknowledged (NACK). Then the master can generate a stop command to abort the transfer, or it can generate a repeated start (Sr) command to start a new transfer.

After the start command, a 7-bit slave address is sent, followed by the read/write (R/W) bit. A 0 represents a write transmission (W), while a 1 indicates a read request (R). Figure 9 shows a complete data transfer.

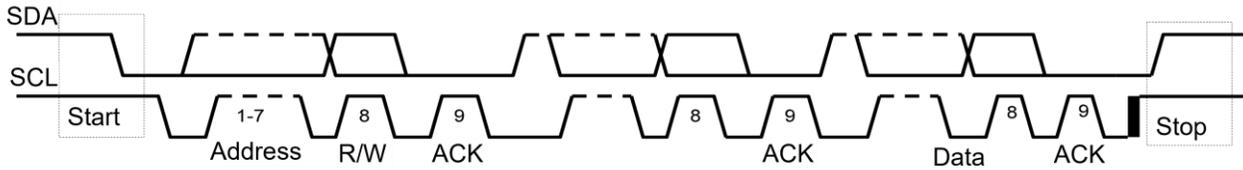


Figure 9: Complete Data Transfer

Active Mode

The MPF42791 must be in active mode to communicate (see Operating Modes for additional detail). To transition to active mode, the SDA line must be pulled low. There is a 20ms timeout before starting operation, or the device transitions back to standby mode. After the operations are completed (e.g. I²C communication or fuel gauge updates) there is a 5ms timeout.

bit can be sent. The device responds with an ACK signal if it is ready for communication.

Protocol Layer

The MPF42791 uses a protocol where 2 bytes are used for the register and command addresses. A length field is also provided to declare the number of bytes in each read or write transaction. The maximum allowed transaction length is 82 bytes of data (not including the register address, length byte, or CRC bytes).

A low 5ms pulse on the SDA line is recommended to transition to active mode. Note that it may take a few additional milliseconds for the MPF42791 to reach active mode and for the I²C to be ready. To verify that the MPF42791 is ready for communication, an I²C header with the start command, the device address, and the R/W

A Cyclic Redundancy Check (CRC) can be used to ensure the transaction’s integrity. When enabled, the last 4 bytes of the transaction correspond to the CRC. Figure 10 and Figure 11 show an example of read and write transactions with CRC, respectively.

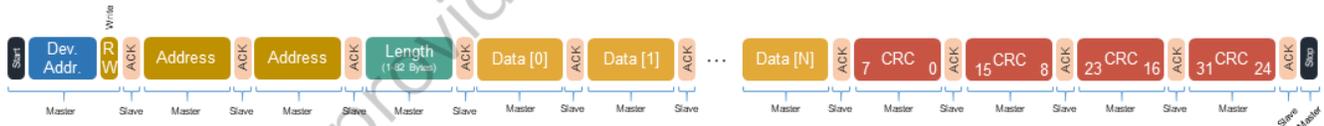


Figure 10: I²C Read Transaction with CRC



Figure 11: I²C Write Transaction with CRC

If CRC is disabled, a write transaction can optionally include the correct CRC bytes to be accepted. During a read, the MPF42791 does not include the CRC, so the NACK signal and stop command from the master come after DATA[x].

valid addresses. An invalid read operation returns a 0 as the data and correct CRC (if enabled), and an invalid write operation is ignored.

Cyclic Redundancy Check (CRC)

The CRC spans the register address, length, and data payload. It is generated in blocks of 4 bytes. If the number of bytes is not a multiple of 4, the

block is padded with 0x00. The algorithm to generate the CRC is listed below.

```

unsigned long crc32 (unsigned short Reg_Address, unsigned
char len, unsigned char *data){
    short i;
    unsigned long crc = 0xffffffff;
    unsigned char dataTemp[4];

    for (i=-1; i<len; i++) {
        if(i==-1) {
            dataTemp[0]=len;
            dataTemp[1]=Reg_Address&0x00FF;
            dataTemp[2]=(Reg_Address&0xFF00)>>8;
            dataTemp[3]=0;
        }
        else dataTemp[i%4]=data[i];
        if((i%4)==3 || i == len-1 || i == -1) {
            for (char j=0; j<4; j++) {
                crc ^= dataTemp[3-j] << 24;
                for (char k = 0; k < 8; ++k) {
                    if ((crc & 0x80000000) != 0)
                        crc = (crc << 1) ^ 0x04C11DB7;
                    else
                        crc <<= 1;
                }
            }
            dataTemp[0]=0;
            dataTemp[1]=0;
            dataTemp[2]=0;
            dataTemp[3]=0;
        }
    }
    return crc;
}

```

To disable CRC and configure the slave address as 0x08, send the following message: {0x00, 0x41, 0x01, 0x08, 0x94, 0xA0, 0xDE, 0xDD} (Address = 0x4100, Length = 0x01, Data = 0x08, CRC = 0xDDDE A094).

provided by CODICO

I²C REGISTER MAP

Fuel Gauge Input

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
VRDG_CELL1, 0x0000	Inputs cell 1's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL2, 0x0002	Inputs cell 2's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL3, 0x0004	Inputs cell 3's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL4, 0x0006	Inputs cell 4's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL5, 0x0008	Inputs cell 5's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL6, 0x000A	Inputs cell 6's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL7, 0x000C	Inputs cell 7's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL8, 0x000E	Inputs cell 8's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL9, 0x0010	Inputs cell 9's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL10, 0x0012	Inputs cell 10's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL11, 0x0014	Inputs cell 11's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL12, 0x0016	Inputs cell 12's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL13, 0x0018	Inputs cell 13's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL14, 0x001A	Inputs cell 14's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL15, 0x001C	Inputs cell 15's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_CELL16, 0x001E	Inputs cell 16's voltage reading.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_PACK, 0x0020	Inputs the pack's voltage reading if VRDG_PACK_EN is enabled.	16, [15:0]	R/W	16-bit unsigned integer, LSB = 2mV	0mV	0mV to 131070mV
IRDG_CELL1, 0x0022	Inputs cell 1's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA

IRDG_CELL2, 0x0026	Inputs cell 2's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL3, 0x002A	Inputs cell 3's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL4, 0x002E	Inputs cell 4's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL5, 0x0032	Inputs cell 5's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL6, 0x0036	Inputs cell 6's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL7, 0x003A	Inputs cell 7's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL8, 0x003E	Inputs cell 8's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL9, 0x0042	Inputs cell 9's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL10, 0x0046	Inputs cell 10's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL11, 0x004A	Inputs cell 11's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL12, 0x004E	Inputs cell 12's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL13, 0x0052	Inputs cell 13's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL14, 0x0056	Inputs cell 14's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL15, 0x005A	Inputs cell 15's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_CELL16, 0x005E	Inputs cell 16's current reading if IRDG_CELLS_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
IRDG_PACK, 0x0062	Inputs the pack's current reading if IRDG_PACK_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 1mA	0mA	-524288mA to +524287mA
CCRDG, 0x0066	Inputs the Coulomb count reading if CCRDG_EN is enabled.	32, [31:0]	R/W	32-bit signed, 2-comp integer LSB = 0.0005mA	0mA	-1073741.832mA to +1073741.832mA
TRDG_AMB, 0x006A	Inputs the ambient temperature reading.	16, [15:0]	R/W	16-bit signed, 2-comp integer LSB = 0.01°C	0°C	-273.15°C to +327.67°C
TRDG_TS1, 0x006C	Inputs temperature sensor 1's reading.	16, [15:0]	R/W	16-bit signed, 2-comp integer LSB = 0.01°C	0°C	-273.15°C to +327.67°C
TRDG_TS2, 0x006E	Inputs temperature sensor 2's reading.	16, [15:0]	R/W	16-bit signed, 2-comp integer LSB = 0.01°C	0°C	-273.15°C to +327.67°C

TRDG_TS3, 0x0070	Inputs temperature sensor 3's reading.	16, [15:0]	R/W	16-bit signed, 2-comp integer LSB = 0.01°C	0°C	-273.15°C to +327.67°C
TRDG_TS4, 0x0072	Inputs temperature sensor 4's reading.	16, [15:0]	R/W	16-bit signed, 2-comp integer LSB = 0.01°C	0°C	-273.15°C to +327.67°C
TRDG_DIE, 0x0074	Inputs the die temperature reading.	16, [15:0]	R/W	16-bit signed, 2-comp integer LSB = 0.01°C	0°C	-273.15°C to +327.67°C
BAL_CELL1, 0x0076	Indicates cell 1's balancing status. 1: Active 0: Inactive	1, [0]	R/W	Boolean true/false	0	0 to 1
BAL_CELL2, 0x0076	Indicates cell 2's balancing status. 1: Active 0: Inactive	1, [1]	R/W	Boolean true/false	0	0 to 1
BAL_CELL3, 0x0076	Indicates cell 3's balancing status. 1: Active 0: Inactive	1, [2]	R/W	Boolean true/false	0	0 to 1
BAL_CELL4, 0x0076	Indicates cell 4's balancing status. 1: Active 0: Inactive	1, [3]	R/W	Boolean true/false	0	0 to 1
BAL_CELL5, 0x0076	Indicates cell 5's balancing status. 1: Active 0: Inactive	1, [4]	R/W	Boolean true/false	0	0 to 1
BAL_CELL6, 0x0076	Indicates cell 6's balancing status. 1: Active 0: Inactive	1, [5]	R/W	Boolean true/false	0	0 to 1
BAL_CELL7, 0x0076	Indicates cell 7's balancing status. 1: Active 0: Inactive	1, [6]	R/W	Boolean true/false	0	0 to 1
BAL_CELL8, 0x0076	Indicates cell 8's balancing status. 1: Active 0: Inactive	1, [7]	R/W	Boolean true/false	0	0 to 1
BAL_CELL9, 0x0077	Indicates cell 9's balancing status. 1: Active 0: Inactive	1, [0]	R/W	Boolean true/false	0	0 to 1
BAL_CELL10, 0x0077	Indicates cell 10's balancing status. 1: Active 0: Inactive	1, [1]	R/W	Boolean true/false	0	0 to 1
BAL_CELL11, 0x0077	Indicates cell 11's balancing status. 1: Active 0: Inactive	1, [2]	R/W	Boolean true/false	0	0 to 1
BAL_CELL12, 0x0077	Indicates cell 12's balancing status. 1: Active 0: Inactive	1, [3]	R/W	Boolean true/false	0	0 to 1
BAL_CELL13, 0x0077	Indicates cell 13's balancing status. 1: Active 0: Inactive	1, [4]	R/W	Boolean true/false	0	0 to 1
BAL_CELL14, 0x0077	Indicates cell 14's balancing status. 1: Active 0: Inactive	1, [5]	R/W	Boolean true/false	0	0 to 1

BAL_CELL15, 0x0077	Indicates cell 15's balancing status. 1: Active 0: Inactive	1, [6]	R/W	Boolean true/false	0	0 to 1
BAL_CELL16, 0x0077	Indicates cell 16's balancing status. 1: Active 0: Inactive	1, [7]	R/W	Boolean true/false	0	0 to 1
HARD_RST, 0x0078	Resets the fuel gauge and lifetime log if set to 1 (i.e. FG_RST = LOG_RST = 1). This is a self-clearing register that returns to 0 automatically.	1, [0]	R/W	Boolean true/false	0	0 to 1
FG_RST, 0x0078	Resets the fuel gauge if set to 1 (i.e. STATUS_RST = SOH_RST = SOC_RST = FULL_RST = EMTY_RST = IR_RST = ETAC_RST = IDIS_AVG_RST = IDIS_END_RST = ICHG_END_RST = ICHG_CC_RST = VCHG_CV_RST = 1). This is a self-clearing register that returns to 0 automatically.	1, [1]	R/W	Boolean true/false	0	0 to 1
LOG_RST, 0x0078	Resets the lifetime log. 1: Reset (self-clearing) 0: No action	1, [2]	R/W	Boolean true/false	0	0 to 1
WKUP, 0x0078	Wakes up the fuel gauge. 1: Wake up (self-clearing) 0: No action	1, [3]	R/W	Boolean true/false	0	0 to 1
STATUS_RST, 0x0078	Resets the pack status. 1: Reset (self-clearing) 0: No action	1, [4]	R/W	Boolean true/false	0	0 to 1
SOH_RST, 0x0078	Resets the SOH. 1: Reset (self-clearing) 0: No action	1, [5]	R/W	Boolean true/false	0	0 to 1
SOC_RST, 0x0078	Resets the SOC. 1: Reset (self-clearing) 0: No action	1, [7]	R/W	Boolean true/false	0	0 to 1
FULL_RST, 0x0079	Resets the pack full. 1: Reset (self-clearing) 0: No action	1, [0]	R/W	Boolean true/false	0	0 to 1
EMTY_RST, 0x0079	Resets the pack empty. 1: Reset (self-clearing) 0: No action	1, [1]	R/W	Boolean true/false	0	0 to 1
IDIS_AVG_RST, 0x0079	Resets the average discharge current. 1: Reset (self-clearing) 0: No action	1, [2]	R/W	Boolean true/false	0	0 to 1
IDIS_END_RST, 0x0079	Resets the discharge termination current. 1: Reset (self-clearing) 0: No action	1, [3]	R/W	Boolean true/false	0	0 to 1
ICHG_END_RST, 0x0079	Resets the charge termination current. 1: Reset (self-clearing) 0: No action	1, [4]	R/W	Boolean true/false	0	0 to 1
ICHG_CC_RST, 0x0079	Resets the charge CC. 1: Reset (self-clearing) 0: No action	1, [5]	R/W	Boolean true/false	0	0 to 1

VCHG_CV_RST, 0x0079	Resets the charge CV. 1: Reset (self-clearing) 0: No action	1, [6]	R/W	Boolean true/false	0	0 to 1
RESR_RST, 0x0079	Resets the ESR. 1: Reset (self-clearing) 0: No action	1, [7]	R/W	Boolean true/false	0	0 to 1
HCONV_RST, 0x007A	Resets the heat transfer coefficient. 1: Reset (self-clearing) 0: No action	1, [0]	R/W	Boolean true/false	0	0 to 1
PCHG_SHW, 0x007B	Shows the maximum charge power in PCHG, the limiting cell ID in PCHG_ID, and the limiting factor in PCHG_LIM (PCHG_SHW_EN by default). 1: Show 0: Do not show	1, [0]	R/W	Control Enable = 1 Disable = 0	PCHG_SHW_EN	0 to 1
PDIS_SHW, 0x007B	Shows the maximum discharge power (PDIS_SHW_EN by default). 1: Show 0: Do not show	1, [1]	R/W	Control Enable = 1 Disable = 0	PDIS_SHW_EN	0 to 1

Fuel Gauge Backup

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
RESR_CELL_DIS_1_BKUP, 0x0200	These bits are the backup register for cell 1's discharge ESR (RESR) state. This address is a R/W alias for the RESR_CELL_DIS_1 register. The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54. Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.	32, [31:0]	R/W	32-bit floating point (single)	0%	-
RESR_CELL_DIS_2_BKUP, 0x0204	These bits are the backup register for cell 2's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_2 register. The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54. Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.	32, [31:0]	R/W	32-bit floating point (single)	0%	-
RESR_CELL_DIS_3_BKUP, 0x0208	These bits are the backup register for cell 3's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_3 register. The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54. Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.	32, [31:0]	R/W	32-bit floating point (single)	0%	-

<p>RESR_CELL_DIS_4_BKUP, 0x020C</p>	<p>These bits are the backup register for cell 4's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_4 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_5_BKUP, 0x0210</p>	<p>These bits are the backup register for cell 5's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_5 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_6_BKUP, 0x0214</p>	<p>These bits are the backup register for cell 6's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_6 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_7_BKUP, 0x0218</p>	<p>These bits are the backup register for cell 7's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_7 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_8_BKUP, 0x021C</p>	<p>These bits are the backup register for cell 8's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_8 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>

<p>RESR_CELL_DIS_9_BKUP, 0x0220</p>	<p>These bits are the backup register for cell 9's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_9 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_10_BKUP, 0x0224</p>	<p>These bits are the backup register for cell 10's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_10 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_11_BKUP, 0x0228</p>	<p>These bits are the backup register for cell 11's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_11 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_12_BKUP, 0x022C</p>	<p>These bits are the backup register for cell 12's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_12 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_13_BKUP, 0x0230</p>	<p>These bits are the backup register for cell 13's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_13 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>

<p>RESR_CELL_DIS_14_BKUP, 0x0234</p>	<p>These bits are the backup register for cell 14's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_14 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_15_BKUP, 0x0238</p>	<p>These bits are the backup register for cell 15's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_15 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_DIS_16_BKUP, 0x023C</p>	<p>These bits are the backup register for cell 16's discharge RESR state. This address is a R/W alias for the RESR_CELL_DIS_16 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_1_BKUP, 0x0240</p>	<p>These bits are the backup register for cell 1's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_1 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_2_BKUP, 0x0244</p>	<p>These bits are the backup register for cell 2's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_2 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>

<p>RESR_CELL_CHG_3_BKUP, 0x0248</p>	<p>These bits are the backup register for cell 3's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_3 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_4_BKUP, 0x024C</p>	<p>These bits are the backup register for cell 4's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_4 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_5_BKUP, 0x0250</p>	<p>These bits are the backup register for cell 5's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_5 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_6_BKUP, 0x0254</p>	<p>These bits are the backup register for cell 6's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_6 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_7_BKUP, 0x0258</p>	<p>These bits are the backup register for cell 7's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_7 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>

<p>RESR_CELL_CHG_8_BKUP, 0x025C</p>	<p>These bits are the backup register for cell 8's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_8 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_9_BKUP, 0x0260</p>	<p>These bits are the backup register for cell 9's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_9 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_10_BKUP, 0x0264</p>	<p>These bits are the backup register for cell 10's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_10 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_11_BKUP, 0x0268</p>	<p>These bits are the backup register for cell 11's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_11 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_12_BKUP, 0x026C</p>	<p>These bits are the backup register for cell 12's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_12 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>

<p>RESR_CELL_CHG_13_BKUP, 0x0270</p>	<p>These bits are the backup register for cell 13's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_13 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_14_BKUP, 0x0274</p>	<p>These bits are the backup register for cell 14's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_14 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_15_BKUP, 0x0278</p>	<p>These bits are the backup register for cell 15's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_15 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>RESR_CELL_CHG_16_BKUP, 0x027C</p>	<p>These bits are the backup register for cell 16's charge RESR state. This address is a R/W alias for the RESR_CELL_CHG_16 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any of the other cell RESR backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the RESR learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit floating point (single)</p>	<p>0%</p>	<p>-</p>
<p>SOH_CELL1_BKUP, 0x02A0</p>	<p>These bits are the backup register for cell 1's SOH. This address is a R/W alias for the SOH_CELL1 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>

<p>SOH_CELL2_BKUP, 0x02A4</p>	<p>These bits are the backup register for cell 2's SOH. This address is a R/W alias for the SOH_CELL2 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL3_BKUP, 0x02A8</p>	<p>These bits are the backup register for cell 3's SOH. This address is a R/W alias for the SOH_CELL3 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL4_BKUP, 0x02AC</p>	<p>These bits are the backup register for cell 4's SOH. This address is a R/W alias for the SOH_CELL4 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL5_BKUP, 0x02B0</p>	<p>These bits are the backup register for cell 5's SOH. This address is a R/W alias for the SOH_CELL5 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL6_BKUP, 0x02B4</p>	<p>These bits are the backup register for cell 6's SOH. This address is a R/W alias for the SOH_CELL6 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>

<p>SOH_CELL7_BKUP, 0x02B8</p>	<p>These bits are the backup register for cell 7's SOH. This address is a R/W alias for the SOH_CELL7 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL8_BKUP, 0x02BC</p>	<p>These bits are the backup register for cell 8's SOH. This address is a R/W alias for the SOH_CELL8 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL9_BKUP, 0x02C0</p>	<p>These bits are the backup register for cell 9's SOH. This address is a R/W alias for the SOH_CELL9 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL10_BKUP, 0x02C4</p>	<p>These bits are the backup register for cell 10's SOH. This address is a R/W alias for the SOH_CELL10 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL11_BKUP, 0x02C8</p>	<p>These bits are the backup register for cell 11's SOH. This address is a R/W alias for the SOH_CELL11 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>

<p>SOH_CELL12_ BKUP, 0x02CC</p>	<p>These bits are the backup register for cell 12's SOH. This address is a R/W alias for the SOH_CELL12 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL13_ BKUP, 0x02D0</p>	<p>These bits are the backup register for cell 13's SOH. This address is a R/W alias for the SOH_CELL13 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL14_ BKUP, 0x02D4</p>	<p>These bits are the backup register for cell 14's SOH. This address is a R/W alias for the SOH_CELL14 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL15_ BKUP, 0x02D8</p>	<p>These bits are the backup register for cell 15's SOH. This address is a R/W alias for the SOH_CELL15 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>
<p>SOH_CELL16_ BKUP, 0x02DC</p>	<p>These bits are the backup register for cell 16's SOH. This address is a R/W alias for the SOH_CELL16 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this or any other of the cell SOH backup registers prepares the fuel gauge to use the values written in these registers as a starting point for the SOH learning.</p>	<p>32, [31:0]</p>	<p>R/W</p>	<p>32-bit unsigned integer LSB = 0.0000001%</p>	<p>0%</p>	<p>0% to 255%</p>

<p>IDIS_AVG_BKUP, 0x0360</p>	<p>These bits are the backup register for the average discharge current. This address is a R/W alias for the IDIS_AVG register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register prepares the fuel gauge to use the values written in this register as a starting point for this learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.001 C-rate</p>	<p>0 C-rate</p>	<p>0 C-rate to 65.535 C-rate</p>
<p>IDIS_END_BKUP, 0x0370</p>	<p>These bits are the backup register for the discharge end current. This address is a R/W alias for the IDIS_END register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register prepares the fuel gauge to use the values written in this register as a starting point for this learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.001 C-rate</p>	<p>0 C-rate</p>	<p>0 C-rate to 65.535 C-rate</p>
<p>ICHG_CC_BKUP, 0x0380</p>	<p>These bits are the backup register for the charge CC current. This address is a R/W alias for the ICHG_CC register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register prepares the fuel gauge to use the values written in this register as a starting point for this learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.001 C-rate</p>	<p>0 C-rate</p>	<p>0 C-rate to 65.535 C-rate</p>
<p>ICHG_END_BKUP, 0x0390</p>	<p>These bits are the backup register for the charge termination current. This address is a R/W alias for the ICHG_END register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register prepares the fuel gauge to use the values written in this register as a starting point for this learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.001 C-rate</p>	<p>0 C-rate</p>	<p>0 C-rate to 65.535 C-rate</p>
<p>VCHG_CV_BKUP, 0x03A0</p>	<p>These bits are the backup register for the charge CV voltage. This address is a R/W alias for the VCHG_CV register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register prepares the fuel gauge to use the values written in this register as a starting point for this learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 2mV</p>	<p>0mV</p>	<p>0mV to 131070mV</p>
<p>HCONV_BKUP, 0x03B0</p>	<p>These bits are the backup register for the heat transfer coefficient. This address is a R/W alias for the HCONV register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register prepares the fuel gauge to use the values written in this register as a starting point for this learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.01W/(m²×K)</p>	<p>0W/(m²×K)</p>	<p>0W/(m²×K) to 655.35W/(m²×K)</p>

<p>RCXN_CELL1_BKUP, 0x03C0</p>	<p>These bits are the backup register for cell 1's connection resistance state. This address is a R/W alias for the RCXN_CELL1 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCXN_CELL2_BKUP, 0x03C2</p>	<p>These bits are the backup register for cell 2's connection resistance state. This address is a R/W alias for the RCXN_CELL2 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCXN_CELL3_BKUP, 0x03C4</p>	<p>These bits are the backup register for cell 3's connection resistance state. This address is a R/W alias for the RCXN_CELL3 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCXN_CELL4_BKUP, 0x03C6</p>	<p>These bits are the backup register for cell 4's connection resistance state. This address is a R/W alias for the RCXN_CELL4 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCXN_CELL5_BKUP, 0x03C8</p>	<p>These bits are the backup register for cell 5's connection resistance state. This address is a R/W alias for the RCXN_CELL5 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>

<p>RCXN_CELL6_BKUP, 0x03CA</p>	<p>These bits are the backup register for cell 6's connection resistance state. This address is a R/W alias for the RCXN_CELL6 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCXN_CELL7_BKUP, 0x03CC</p>	<p>These bits are the backup register for cell 7's connection resistance state. This address is a R/W alias for the RCXN_CELL7 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCXN_CELL8_BKUP, 0x03CE</p>	<p>These bits are the backup register for cell 8's connection resistance state. This address is a R/W alias for the RCXN_CELL8 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCXN_CELL9_BKUP, 0x03D0</p>	<p>These bits are the backup register for cell 9's connection resistance state. This address is a R/W alias for the RCXN_CELL9 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCXN_CELL10_BKUP, 0x03D2</p>	<p>These bits are the backup register for cell 10's connection resistance state. This address is a R/W alias for the RCXN_CELL10 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>

<p>RCCN_CELL11_BKUP, 0x03D4</p>	<p>These bits are the backup register for cell 11's connection resistance state. This address is a R/W alias for the RCCN_CELL11 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCCN register prepares the fuel gauge to use the values written in this register as a starting point for the RCCN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCCN_CELL12_BKUP, 0x03D6</p>	<p>These bits are the backup register for cell 12's connection resistance state. This address is a R/W alias for the RCCN_CELL12 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCCN register prepares the fuel gauge to use the values written in this register as a starting point for the RCCN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCCN_CELL13_BKUP, 0x03D8</p>	<p>These bits are the backup register for cell 13's connection resistance state. This address is a R/W alias for the RCCN_CELL13 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCCN register prepares the fuel gauge to use the values written in this register as a starting point for the RCCN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCCN_CELL14_BKUP, 0x03DA</p>	<p>These bits are the backup register for cell 14's connection resistance state. This address is a R/W alias for the RCCN_CELL14 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCCN register prepares the fuel gauge to use the values written in this register as a starting point for the RCCN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>
<p>RCCN_CELL15_BKUP, 0x03DC</p>	<p>These bits are the backup register for cell 15's connection resistance state. This address is a R/W alias for the RCCN_CELL15 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCCN register prepares the fuel gauge to use the values written in this register as a starting point for the RCCN learning.</p>	<p>16, [15:0]</p>	<p>R/W</p>	<p>16-bit unsigned integer LSB = 0.1mΩ</p>	<p>0mΩ</p>	<p>0mΩ to 6553.5mΩ</p>

RCXN_CELL16_BKUP, 0x03DE	<p>These bits are the backup register for cell 16's connection resistance state. This address is a R/W alias for the RCXN_CELL16 register.</p> <p>The fuel gauge must be in learning backup mode for this register to be written. For more details, see the FG_BKUP_ENABLE register on page 33 and the FG_BKUP_FLAG register on page 54.</p> <p>Writing to this backup register or any other cell RCXN register prepares the fuel gauge to use the values written in this register as a starting point for the RCXN learning.</p>	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
FG_BKUP_ENABLE, 0x03F0	Enables learning backup mode. See the FG_BKUP_FLAG register on page 54 for more details.	1, [0]	Write-only	Control Enable = 1 Disable = 0	0	0 to 1

Fuel Gauge Output

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
IT_DONE_INTR, 0x0400	Signals an interrupt when an iteration has been completed. Setting this bit to 1 clears the interrupt. This interrupt bit is automatically cleared when a new iteration is requested.	1, [0]	W1C/RO	Boolean true/false	0	0 to 1
STATUS_INTR, 0x0400	Signals an interrupt when there is a change in the STATUS register. Setting this bit to 1 clears the interrupt.	1, [1]	W1C/RO	Boolean true/false	0	0 to 1
EMPTY_LIM_INTR, 0x0400	Signals an interrupt when there is a change in the EMPTY_LIM register, which indicates that the empty limiting factor has changed. Setting this bit to 1 clears the interrupt.	1, [2]	W1C/RO	Boolean true/false	0	0 to 1
FULL_LIM_INTR, 0x0400	Signals an interrupt when there is a change in the FULL_LIM register, which indicates that the full limiting factor has changed. Setting this bit to 1 clears the interrupt.	1, [3]	W1C/RO	Boolean true/false	0	0 to 1
SOC_PACK_RSLT_INTR, 0x0400	Signals an interrupt when there is a change in the SOC_PACK_RSLT register, which indicates that the pack SOC result has changed. Setting this bit to 1 clears the interrupt.	1, [4]	W1C/RO	Boolean true/false	0	0 to 1
OT_WARN_INTR, 0x0400	Signals an interrupt when an over-temperature (OT) condition occurs; check the statuses of OT_ID, WARN_OTDIS, WARN_OTCHG_CC, and WARN_OTCHG_END for more details. Setting this bit to 1 clears the interrupt.	1, [5]	W1C/RO	Boolean true/false	0	0 to 1
IDIS_AVG_INTR, 0x0400	Signals an interrupt when there is a change in the IDIS_AVG_LRN or IDIS_AVG_RSLT registers, which indicates a change for the average discharge current learning. Setting this bit to 1 clears the interrupt.	1, [6]	W1C/RO	Boolean true/false	0	0 to 1
IDIS_END_INTR, 0x0400	Signals an interrupt when there is a change in the IDIS_END_LRN or IDIS_END_RSLT registers, which indicates a change for the discharge end current learning. Setting this bit to 1 clears the interrupt.	1, [7]	W1C/RO	Boolean true/false	0	0 to 1

ICHG_CC_INTR, 0x0400	Signals an interrupt when there is a change in the ICHG_CC_LRN or ICHG_CC_RSLT registers, which indicates a change for the charge CC learning. Setting this bit to 1 clears the interrupt.	1, [8]	W1C/RO	Boolean true/false	0	0 to 1
ICHG_END_INTR, 0x0400	Signals an interrupt when there is a change in the ICHG_END_LRN or ICHG_END_RSLT registers, which indicates a change for the charge end current learning. Setting this bit to 1 clears the interrupt.	1, [9]	W1C/RO	Boolean true/false	0	0 to 1
VCHG_CV_INTR, 0x0400	Signals an interrupt when there is a change in the VCHG_CV_LRN or VCHG_CV_RSLT registers, which indicates a change for the charge CV learning. Setting this bit to 1 clears the interrupt.	1, [10]	W1C/RO	Boolean true/false	0	0 to 1
SORESR_CELLS_INTR, 0x0400	Signals an interrupt when there is a change in the RESR_LRN_CELLx or RESR_RSLT_CELLx registers, which indicates a change for ESR learning. Setting this bit to 1 clears the interrupt.	1, [11]	W1C/RO	Boolean true/false	0	0 to 1
RCXN_CELL_S_INTR, 0x0400	Signals an interrupt when there is a change in the RCXN_LRN_CELLx or RCXN_RSLT_CELLx registers, which indicates a change for the cells' connection resistance learning. Setting this bit to 1 clears the interrupt.	1, [12]	W1C/RO	Boolean true/false	0	0 to 1
HCONV_INTR, 0x0400	Signals an interrupt when there is a change in the HCONV_LRN or HCONV_RSLT registers, which indicates a change for the heat transfer coefficient learning. Setting this bit to 1 clears the interrupt.	1, [13]	W1C/RO	Boolean true/false	0	0 to 1
SOH_CELLS_INTR, 0x0400	Signals an interrupt when there is a change in the SOH_LRN_CELLx or SOH_RSLT_CELLx registers, which indicates a change for the cell's SOH learning. Setting this bit to 1 clears the interrupt.	1, [14]	W1C/RO	Boolean true/false	0	0 to 1
PDIS_LIM_INTR, 0x0400	Signals an interrupt when there is a change in the PDIS_LIM register, which indicates a change for the discharge power limiting factor. Setting this bit to 1 clears the interrupt.	1, [16]	W1C/RO	Boolean true/false	0	0 to 1
PCHG_LIM_INTR, 0x0400	Signals an interrupt when there is a change in the PCHG_LIM register, which indicates a change for the charge power limiting factor. Setting this bit to 1 clears the interrupt.	1, [17]	W1C/RO	Boolean true/false	0	0 to 1
STATUS, 0x0403	Indicates the pack's current status. 0: Charge 1: Discharge 2: Rest	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
SOC_ABS_CELL1, 0x0524	Returns cell 1's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL2, 0x0525	Returns cell 2's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL3, 0x0526	Returns cell 3's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL4, 0x0527	Returns cell 4's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%

SOC_ABS_CELL5, 0x0528	Returns cell 5's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL6, 0x0529	Returns cell 6's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL7, 0x052A	Returns cell 7's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL8, 0x052B	Returns cell 8's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL9, 0x052C	Returns cell 9's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL10, 0x052D	Returns cell 10's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL11, 0x052E	Returns cell 11's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL12, 0x052F	Returns cell 12's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL13, 0x0530	Returns cell 13's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL14, 0x0531	Returns cell 14's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL15, 0x0532	Returns cell 15's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
SOC_ABS_CELL16, 0x0533	Returns cell 16's absolute SOC. Shows as reserved.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL1, 0x0578	Returns cell 1's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL2, 0x0579	Returns cell 2's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL3, 0x057A	Returns cell 3's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL4, 0x057B	Returns cell 4's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL5, 0x057C	Returns cell 5's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL6, 0x057D	Returns cell 6's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL7, 0x057E	Returns cell 7's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL8, 0x057F	Returns cell 8's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%

EMPTY_SOC_CELL9, 0x0580	Returns cell 9's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL10, 0x0581	Returns cell 10's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL11, 0x0582	Returns cell 11's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL12, 0x0583	Returns cell 12's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL13, 0x0584	Returns cell 13's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL14, 0x0585	Returns cell 14's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL15, 0x0586	Returns cell 15's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_SOC_CELL16, 0x0587	Returns cell 16's empty SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	0%	0% to 100%
EMPTY_ID, 0x0588	Returns the cell ID for the cell that is empty limiting the pack.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 1 (cell ID)	0 (cell ID)	1 to 16 (cell ID)
EMPTY_RUNTIME, 0x0589	Returns the remaining time for the pack to become empty. Smoother changes for the remaining time estimate can be achieved by increasing EMPTY_RUNTIME_FILTER with the tradeoff of an increased phase delay.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1s	0s	0s to 65535s
EMPTY_DTEMP, 0x058B	Returns the predicted temperature to reach an empty pack.	16, [15:0]	Read-only	16-bit signed, 2-comp integer LSB = 0.01	0	-327.68 to +327.67
EMPTY_LIM, 0x058D	Outputs the pack's empty limiting factor. 0: Cell 1: Pack	8, [7:0]	Read-only	Non-standard LSB = 1	0	0 to 1
FULL_SOC_CELL1, 0x0592	Returns cell's 1 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL2, 0x0593	Returns cell's 2 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL3, 0x0594	Returns cell's 3 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL4, 0x0595	Returns cell's 4 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL5, 0x0596	Returns cell's 5 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL6, 0x0597	Returns cell's 6 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL7, 0x0598	Returns cell's 7 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%

FULL_SOC_CELL8, 0x0599	Returns cell's 8 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4 %	100%	0% to 100%
FULL_SOC_CELL9, 0x059A	Returns cell's 9 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL10, 0x059B	Returns cell's 10 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL11, 0x059C	Returns cell's 11 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL12, 0x059D	Returns cell's 12 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL13, 0x059E	Returns cell's 13 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL14, 0x059F	Returns cell's 14 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL15, 0x05A0	Returns cell's 15 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_SOC_CELL16, 0x05A1	Returns cell's 16 full SOC.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.4%	100%	0% to 100%
FULL_ID, 0x05A2	Returns the cell ID for the cell that is full limiting the pack.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 1 (cell ID)	0 (cell ID)	1 to 16 (cell ID)
FULL_RUNTIME, 0x05A3	Returns the remaining time to reach a full pack.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1s	0s	0s to 65535s
FULL_RUNTIME_CC, 0x05A5	Returns the remaining time to reach the end of the charge CC region.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1	0	0 to 65535
FULL_DTEMP, 0x05A7	Returns the predicted temperature to reach a full pack.	16, [15:0]	Read-only	16-bit signed 2-comp integer LSB = 0.01	0	-327.28 to +327.27
FULL_DTEMP_CC, 0x05A9	Returns the predicted temperature increase at the end of the charge CC region.	16, [15:0]	Read-only	16-bit signed 2-comp integer LSB = 0.01	0	-327.28 to +327.27
FULL_LIM, 0x05AB	Returns the pack's full limiting factor. 0: Cell 1: Pack 2: Charger 3: Smart charger cell 4: Smart charger pack	3, [2:0]	Read-only	Non-standard LSB = 1	0	0 to 4
SOC_PACK, 0x05AC	Returns the pack's SOC.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.002 %	0%	0% to 100%
SOC_PACK_UNAVBL, 0x05AF	Indicates whether the pack has an unavailable SOC due to empty or full conditions, or a mismatch between cells. Reflects the quantity of pack's unusable capacity.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.002 %	0%	0% to 100%

IDIS_AVG, 0x05B1	Returns the learned value for the typical load current, which is drained from the battery during its use (the average discharge current).	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.001 C-rate	0 C-rate	0 C-rate to 65.535 C-rate
IDIS_AVG_LRN, 0x05B3	Returns the state of the discharge average current learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
IDIS_AVG_RSLT, 0x05B4	Returns the result of the detected discharge average current. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
IDIS_END, 0x05B5	Returns the learned value for the typical discharge termination current.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.001 C-rate	0 C-rate	0 C-rate to 65.535 C-rate
IDIS_END_LRN, 0x05B7	Returns the state of the discharge termination current learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
IDIS_END_RSLT, 0x05B8	Returns the result of the detected discharge termination current value. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
ICHG_CC, 0x05B9	Returns the learned charge current of the charger in the CC region, as performed by the algorithm.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.001 C-rate	0 C-rate	0 C-rate to 65.535 C-rate
ICHG_CC_LRN, 0x05BB	Returns the state of the charge CC learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
ICHG_CC_RSLT, 0x05BC	Returns the result of the detected charge CC value. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
ICHG_END, 0x05BD	Returns the learned value for the typical end of the discharge current	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.001 C-rate	0 C-rate	0 C-rate to 131070 C-rate
ICHG_END_LRN, 0x05CF	Returns the state of the charge termination current learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3

ICHG_END_RSLT_0x05C0	Returns the result of the detected charge termination current value. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
VCHG_CV_0x05C1	Returns the learned value for the typical charge CV voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 2mV	0mV	0mV to 131070mV
VCHG_CV_LRN_0x05C3	Returns the state of the charge CV learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
VCHG_CV_RSLT_0x05C4	Returns the state of the detected charge CV result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_CELL_DIS_1_0x05C5	Returns cell 1's discharge ESR (RESR) state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_2_0x05C9	Returns cell 2's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_3_0x05CD	Returns cell 3's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_4_0x05D1	Returns cell 4's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_5_0x05D5	Returns cell 5's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_6_0x05D9	Returns cell 6's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_7_0x05DD	Returns cell 7's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_8_0x05E1	Returns cell 8's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_9_0x05E5	Returns cell 9's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_10_0x05E9	Returns cell 10's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_11_0x05ED	Returns cell 11's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_12_0x05F1	Returns cell 12's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_13_0x05F5	Returns cell 13's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_DIS_14_0x05F9	Returns cell 14's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-

RESR_CELL_ DIS_15, 0x05FD	Returns cell 15's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ DIS_16, 0x0601	Returns cell 16's discharge RESR state, which is compared to BOL for discharging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_1, 0x0605	Returns cell 1's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_2, 0x0609	Returns cell 2's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_3, 0x060D	Returns cell 3's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_4, 0x0611	Returns cell 4's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_5, 0x0615	Returns cell 5's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_6, 0x0619	Returns cell 6's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_7, 0x061D	Returns cell 7's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_8, 0x0621	Returns cell 8's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_9, 0x0625	Returns cell 9's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_10, 0x0629	Returns cell 10's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_11, 0x062D	Returns cell 11's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_12, 0x0631	Returns cell 12's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_13, 0x0635	Returns cell 13's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_14, 0x0639	Returns cell 14's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_15, 0x063D	Returns cell 15's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_CELL_ CHG_16, 0x0641	Returns cell 16's charge RESR state, which is compared to BOL for charging.	32, [31:0]	Read-only	32-bit floating point (single)	100%	-
RESR_LRN_ CELL1, 0x0645	Returns the state of cell 1's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_ CELL2, 0x0646	Returns the state of cell 2's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2

RESR_LRN_CELL3, 0x0647	Returns the state of cell 3's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL4, 0x0648	Returns the state of cell 4's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL5, 0x0649	Returns the state of cell 5's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL6, 0x064A	Returns the state of cell 6's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL7, 0x064B	Returns the state of cell 7's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL8, 0x064C	Returns the state of cell 8's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL9, 0x064D	Returns the state of cell 9's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL10, 0x064E	Returns the state of cell 10's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL11, 0x064F	Returns the state of cell 11's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL12, 0x0650	Returns the state of cell 12's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL13, 0x0651	Returns the state of cell 13's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL14, 0x0652	Returns the state of cell 14's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_LRN_CELL15, 0x0653	Returns the state of cell 15's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2

RESR_LRN_CELL16, 0x0654	Returns the state of cell 16's RESR learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RESR_RSLT_CELL1, 0x0655	Returns the state of cell 1's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL2, 0x0656	Returns the state of cell 2's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL3, 0x0657	Returns the state of cell 3's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL4, 0x0658	Returns the state of cell 4's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL5, 0x0659	Returns the state of cell 5's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL6, 0x065A	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL7, 0x065B	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL8, 0x065C	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL9, 0x065D	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL10, 0x065E	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3

RESR_RSLT_CELL11, 0x065F	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL12, 0x0660	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL13, 0x0661	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL14, 0x0662	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL15, 0x0663	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RESR_RSLT_CELL16, 0x0664	Returns the state of cell 6's RESR result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCTXN_CELL1, 0x0665	Returns cell 1's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCTXN_CELL2, 0x0667	Returns cell 2's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCTXN_CELL3, 0x0669	Returns cell 3's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCTXN_CELL4, 0x066B	Returns cell 4's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCTXN_CELL5, 0x066D	Returns cell 5's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCTXN_CELL6, 0x066F	Returns cell 6's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCTXN_CELL7, 0x0671	Returns cell 7's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ

RCXN_CELL8, 0x0673	Returns cell 8's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCXN_CELL9, 0x0675	Returns cell 9's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCXN_CELL10, 0x0677	Returns cell 10's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCXN_CELL11, 0x0679	Returns cell 11's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCXN_CELL12, 0x067B	Returns cell 12's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCXN_CELL13, 0x067D	Returns cell 13's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCXN_CELL14, 0x067F	Returns cell 14's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCXN_CELL15, 0x0681	Returns cell 15's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCXN_CELL16, 0x0683	Returns cell 16's connection resistance learning value.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mΩ	0mΩ	0mΩ to 6553.5mΩ
RCXN_LRN_CELL1, 0x0685	Returns the state of cell 1's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCXN_LRN_CELL2, 0x0686	Returns the state of cell 1's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCXN_LRN_CELL3, 0x0687	Returns the state of cell 3's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCXN_LRN_CELL4, 0x0688	Returns the state of cell 4's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCXN_LRN_CELL5, 0x0689	Returns the state of cell 5's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2

RCCN_LRN_CELL6, 0x068A	Returns the state of cell 6's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL7, 0x068B	Returns the state of cell 7's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL8, 0x068C	Returns the state of cell 8's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL9, 0x068D	Returns the state of cell 9's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL10, 0x068E	Returns the state of cell 10's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL11, 0x068F	Returns the state of cell 11's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL12, 0x0690	Returns the state of cell 12's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL13, 0x0691	Returns the state of cell 13's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL14, 0x0692	Returns the state of cell 14's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL15, 0x0693	Returns the state of cell 15's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2
RCCN_LRN_CELL16, 0x0694	Returns the state of cell 16's connection resistance learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 2

RCCN_RSLT_CELL1, 0x0695	Returns the state of cell 1's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCCN_RSLT_CELL2, 0x0696	Returns the state of cell 2's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCCN_RSLT_CELL3, 0x0697	Returns the state of cell 3's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCCN_RSLT_CELL4, 0x0698	Returns the state of cell 4's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCCN_RSLT_CELL5, 0x0699	Returns the state of cell 5's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCCN_RSLT_CELL6, 0x069A	Returns the state of cell 6's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCCN_RSLT_CELL7, 0x069B	Returns the state of cell 7's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCCN_RSLT_CELL8, 0x069C	Returns the state of cell 8's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCCN_RSLT_CELL9, 0x069D	Returns the state of cell 9's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3

RCXN_RSLT_CELL10, 0x069E	Returns the state of cell 10's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCXN_RSLT_CELL11, 0x069F	Returns the state of cell 11's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCXN_RSLT_CELL12, 0x06A0	Returns the state of cell 12's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCXN_RSLT_CELL13, 0x06A1	Returns the state of cell 13's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCXN_RSLT_CELL14, 0x06A2	Returns the state of cell 14's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCXN_RSLT_CELL15, 0x06A3	Returns the state of cell 15's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
RCXN_RSLT_CELL16, 0x06A4	Returns the state of cell 16's connection resistance result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
HCONV, 0x06A5	Returns the heat transfer coefficient.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.01W/(m ² ×K)	23W/(m ² ×K)	0W/(m ² ×K) to 655.35W/(m ² ×K)
HCONV_LRN, 0x06A7	Returns the state of the heat transfer coefficient learning. 0: Disabled 1: Paused 2: Ongoing	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3
HCONV_RSLT, 0x06A8	Returns the state of the heat transfer coefficient result. 0: Default 1: Updated 2: Updated to max 3: Updated to min	2, [1:0]	Read-only	8-bit unsigned integer LSB = 1	0	0 to 3

SOH_PACK, 0x06A9	Returns the pack's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL1, 0x06AD	Returns cell 1's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL2, 0x06B1	Returns cell 2's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL3, 0x06B5	Returns cell 3's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL4, 0x06B9	Returns cell 4's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL5, 0x06BD	Returns cell 5's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL6, 0x06C1	Returns cell 6's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL7, 0x06C5	Returns cell 7's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL8, 0x06C9	Returns cell 8's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL9, 0x06CD	Returns cell 9's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL10, 0x06D1	Returns cell 10's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL11, 0x06D5	Returns cell 11's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL12, 0x06D9	Returns cell 12's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL13, 0x06DD	Returns cell 13's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL14, 0x06E1	Returns cell 14's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL15, 0x06E5	Returns cell 15's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
SOH_CELL16, 0x06E9	Returns cell 16's SOH.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.0000001%	0%	0% to 100%
PRDG, 0x07AD	Returns the power state of the battery pack, which is equal to the pack current multiplied by the battery pack voltage.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.1mW	0mW	0mW to 429496729.5mW
PDIS, 0x07B1	Returns the maximum possible applicable discharge power.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.1mW	0mW	0mW to 429496729.5mW
PDIS_ID, 0x07B5	Returns the cell ID that is most significantly limiting the maximum discharge power estimate.	5, [4:0]	Read-only	8-bit unsigned integer LSB = 1 (cell ID)	1 (cell ID)	1 to 16 (cell ID)

PDIS_LIM, 0x07B6	Returns the limiting factor in the maximum discharge power estimate. 0: Cell 1: Pack	1, [0]	Read-only	8-bit unsigned integer	0	0 to 1
PCHG, 0x07B7	Returns the maximum possible applicable charge power.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 0.1mW	0mW	0mW to 429496729.5mW
PCHG_ID, 0x07BB	Returns the cell ID that is most significantly limiting the maximum charge power estimate.	5, [4:0]	Read-only	8-bit unsigned integer LSB = 1 (cell ID)	1 (cell ID)	1 to 16 (cell ID)
PCHG_LIM, 0x07BC	Returns the limiting factor in the maximum charge power estimate. 0: Cell 1: Pack	1, [0]	Read-only	8-bit unsigned integer	0	0 to 1
OT_ID, 0x07BD	Returns the cell ID with the highest temperature, per the cell temperature sensor.	3, [2:0]	Read-only	8-bit unsigned integer LSB = 1 (cell ID) Offset = 1 (cell ID)	1 (cell ID)	1 to 4 (cell ID)
WARN_OTCHG_CC, 0x07BE	Returns the predicted charge CC over-temperature (OT) warning.	1, [0]	Read-only	Boolean true/false	0	0 to 1
WARN_OTCHG_END, 0x07BE	Returns the predicted charge termination OT warning.	1, [1]	Read-only	Boolean true/false	0	0 to 1
WARN_OTDIS, 0x07BE	Returns the predicted discharge OT warning.	1, [2]	Read-only	Boolean true/false	0	0 to 1
FG_ITER, 0x07BF	Counts the number of iterations executed by the fuel gauge.	32, [31:0]	Read-only	32-bit unsigned integer LSB = 1	0	0 to 4294967295

Fuel Gauge Lifetime Log

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
VRDG_MIN_CELL1, 0x0C00	Returns cell 1's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL2, 0x0C02	Returns cell 2's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL3, 0x0C04	Returns cell 3's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL4, 0x0C06	Returns cell 4's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL5, 0x0C08	Returns cell 5's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL6, 0x0C0A	Returns cell 6's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL7, 0x0C0C	Returns cell 7's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL8, 0x0C0E	Returns cell 8's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL9, 0x0C10	Returns cell 9's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV

VRDG_MIN_CELL10_0x0C12	Returns cell 10's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL11_0x0C14	Returns cell 11's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL12_0x0C16	Returns cell 12's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL13_0x0C18	Returns cell 13's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL14_0x0C1A	Returns cell 14's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL15_0x0C1C	Returns cell 15's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MIN_CELL16_0x0C1E	Returns cell 16's minimum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	5000mV	0mV to 6553.5mV
VRDG_MAX_CELL1_0x0C20	Returns cell 1's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL2_0x0C22	Returns cell 2's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL3_0x0C24	Returns cell 3's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL4_0x0C26	Returns cell 4's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL5_0x0C28	Returns cell 5's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL6_0x0C2A	Returns cell 6's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL7_0x0C2C	Returns cell 7's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL8_0x0C2E	Returns cell 8's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL9_0x0C30	Returns cell 9's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL10_0x0C32	Returns cell 10's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL11_0x0C34	Returns cell 11's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL12_0x0C36	Returns cell 12's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL13_0x0C38	Returns cell 13's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV

VRDG_MAX_CELL14, 0x0C3A	Returns cell 14's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL15, 0x0C3C	Returns cell 15's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_MAX_CELL16, 0x0C3E	Returns cell 16's maximum measured voltage.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 0.1mV	0mV	0mV to 6553.5mV
VRDG_DMAX, 0x0C40	Returns the maximum measured voltage difference between the cells.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 2mV	0mV	0mV to 131070 mV
VRDG_DMAX_IDMAX, 0x0C41	Identifies the cell with the highest voltage. This cell is used to calculate the maximum voltage difference between the cells.	4, [3:0]	Read-only	Non-standard LSB = 1 (cell ID) Offset = 1 (cell ID)	1 (cell ID)	1 to 16 (cell ID)
VRDG_DMAX_IDMIN, 0x0C41	Identifies the cell with the lowest voltage. This cell is used to calculate the maximum voltage difference between the cells.	4, [7:4]	Read-only	Non-standard LSB = 1 (cell ID) Offset = 1 (cell ID)	1 (cell ID)	1 to 16 (cell ID)
BAL_ETIME_CELL1, 0x0C42	Returns the total time that cell 1 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL2, 0x0C44	Returns the total time that cell 2 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL3, 0x0C46	Returns the total time that cell 3 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL4, 0x0C48	Returns the total time that cell 4 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL5, 0x0C4A	Returns the total time that cell 5 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL6, 0x0C4C	Returns the total time that cell 6 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL7, 0x0C4E	Returns the total time that cell 7 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL8, 0x0C50	Returns the total time that cell 8 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL9, 0x0C52	Returns the total time that cell 9 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL10, 0x0C54	Returns the total time that cell 10 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL11, 0x0C56	Returns the total time that cell 11 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL12, 0x0C58	Returns the total time that cell 12 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL13, 0x0C5A	Returns the total time that cell 13 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL14, 0x0C5C	Returns the total time that cell 14 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min

BAL_ETIME_CELL15, 0x0C5E	Returns the total time that cell 15 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
BAL_ETIME_CELL16, 0x0C60	Returns the total time that cell 16 has been balanced.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1min	0min	0min to 65535min
TRDG_MIN_TS1, 0x0C62	Returns the minimum temperature measured with temperature sensor 1.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	97.5°C	-30°C to +97.5°C
TRDG_MIN_TS2, 0x0C63	Returns the minimum temperature measured with temperature sensor 2.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	97.5°C	-30°C to +97.5°C
TRDG_MIN_TS3, 0x0C64	Returns the minimum temperature measured with temperature sensor 2.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	97.5°C	-30°C to +97.5°C
TRDG_MIN_TS4, 0x0C65	Returns the minimum temperature measured with temperature sensor 2.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	97.5°C	-30°C to +97.5°C
TRDG_MAX_TS1, 0x0C66	Returns the maximum temperature measured with temperature sensor 1.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	97.5°C	-30°C to +97.5°C
TRDG_MAX_TS2, 0x0C67	Returns the maximum temperature measured with temperature sensor 2.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	97.5°C	-30°C to +97.5°C
TRDG_MAX_TS3, 0x0C68	Returns the maximum temperature measured with temperature sensor 3.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	97.5°C	-30°C to +97.5°C
TRDG_MAX_TS4, 0x0C69	Returns the maximum temperature measured with temperature sensor 4.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	97.5°C	-30°C to +97.5°C
TRDG_DMAX, 0x0C6A	Returns the maximum measured temperature difference between temperature the sensors.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	0°C	0°C to 127.5°C
TRDG_DMAX_IDMAX, 0x0C6B	Identifies the cell with the highest temperature. This cell is used to calculate the maximum temperature difference between the cells.	4, [3:0]	Read-only	Non-standard LSB = 1 (cell ID) Offset = 1 (cell ID)	1 (cell ID)	1 to 4 (cell ID)
TRDG_DMAX_IDMIN, 0x0C6B	Identifies the cell with the lowest temperature. This cell is used to calculate the maximum temperature difference between the cells.	4, [7:4]	Read-only	Non-standard LSB = 1 (cell ID) Offset = 1 (cell ID)	1 (cell ID)	1 to 4 (cell ID)
TRDG_ETIME_UND0, 0x0C6C	Returns the amount of time that the battery's average temperature has been below 0°C .	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_0TO5, 0x0C6E	Returns the amount of time that the battery's average temperature has been between 0°C and 5°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_5TO10, 0x0C70	Returns the amount of time that the battery's average temperature has been between 5°C and 10°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_10TO15, 0x0C72	Returns the amount of time that the battery's average temperature has been between 10°C and 15°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_15TO20, 0x0C74	Returns the amount of time that the battery's average temperature has been between 15°C and 20°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_20TO25, 0x0C76	Returns the amount of time that the battery's average temperature has been between 20°C and 25°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr

TRDG_ETIME_ 25TO30, 0x0C78	Returns the amount of time that the battery's average temperature has been between 25°C and 30°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_ 30TO35, 0x0C7A	Returns the amount of time that the battery's average temperature has been between 30°C and 35°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_ 35TO40, 0x0C7C	Returns the amount of time that the battery's average temperature has been between 35°C and 40°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_ 40TO45, 0x0C7E	Returns the amount of time that the battery's average temperature has been between 40°C and 45°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_ 45TO50, 0x0C80	Returns the amount of time that the battery's average temperature has been between 45°C and 50°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_ 50TO55, 0x0C82	Returns the amount of time that the battery's average temperature has been between 50°C and 55°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_ 55TO60, 0x0C84	Returns the amount of time that the battery's average temperature has been between 55°C and 60°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_ETIME_ ABV60, 0x0C86	Returns the amount of time that the battery's average temperature exceeds 60°C.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1hr	0hr	0hr to 65535hr
TRDG_MIN_ DIE, 0x0C88	Returns the minimum temperature measured on the die.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	0°C	-30°C to +97.5°C
TRDG_MAX_ DIE, 0x0C89	Returns the maximum temperature measured on the die.	8, [7:0]	Read-only	8-bit unsigned integer LSB = 0.5°C	-30°C	-30°C to +97.5°C
IRDG_MAX_ CHG, 0x0C8A	Returns the maximum measured charge current.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 2mA	0mA	0mA to 131070 mA
IRDG_MAX_ DIS, 0x0C8C	Returns the maximum measured discharge current.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 2mA	0mA	0mA to 131070mA
NCHG_CYC, 0x0C8E	Returns the number of completed charge cycles, which is when the battery pack's SOC has charged from below 15% to above 85%.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1 Event(s)	0 event(s)	0 event(s) to 65535 event(s)
NCHG_10SOC, 0x0C90	Returns the number of times the pack has been charged by 10%.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1 event	0 event(s)	0 event(s) to 65535 event(s)
NSHDN, 0x0C92	Returns the number of times the fuel gauge has woken up after sleep mode, a hard reset, or a shutdown.	16, [15:0]	Read-only	16-bit unsigned integer LSB = 1 event	0 event(s)	0 event(s) to 65535 event(s)

Fuel Gauge Flags

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
FG_EXE_FLAG, 0x0F00	1: Fuel gauge calculations are ongoing 0: Fuel gauge calculations are complete	1, [0]	Read-only	Non-standard	0	0 to 1
EDIT_SETTINGS_FLAG, 0x0F00	1: Fuel gauge settings can be edited on the fly 0: Fuel gauge settings cannot be edited on the fly	1, [1]	Read-only	Non-standard	0	0 to 1
CONFIG_MODE_FLAG, 0x0F00	1: The fuel gauge is in configuration mode 0: The fuel gauge is in running mode	1, [2]	Read-only	Non-standard	0	0 to 1
CONFIG_EXIT_FLAG, 0x0F00	1: There is a pending exit from configuration mode 0: There is no pending exit from configuration mode	1, [3]	Read-only	Non-standard	0	0 to 1
CONFIG_RST_FLAG, 0x0F00	1: There is a pending reset to set the configurations to their default values 0: There is no pending reset to set the configurations to their default values	1, [4]	Read-only	Non-standard	0	0 to 1
FG_RST_FLAG, 0x0F00	1: There is no pending reset for the fuel gauge algorithm 0: There is a pending reset for the fuel gauge algorithm	1, [5]	Read-only	Non-standard	0	0 to 1
LOG_RST_FLAG, 0x0F00	1: The lifetime log registers are being reset in the current fuel gauge iteration 0: No lifetime log registers are being reset	1, [6]	Read-only	Non-standard	0	0 to 1
LOG_RST_PNDG_FLAG, 0x0F00	1: There is a pending reset to the lifetime log registers 0: There is no pending reset to the lifetime log registers	1, [7]	Read-only	Non-standard	0	0 to 1
CUST_BLOCK_FLAG, 0x0F00	1: Customer block is active 0: No customer block is active	1, [8]	Read-only	Non-standard	0	0 to 1
CUST_BLOCK_FAIL_CNTR_FLAG, 0x0F00	This counter contains the number of failed attempts at writing the password. If there are four failed attempts, then CUST_BLOCK_LOCKED_FLAG is set and this feature is locked until a hardware reset is performed.	2, [10:9]	Read-only	Non-standard LSB = 1	0	0 to 3
CUST_BLOCK_LOCKED_FLAG, 0x0F00	1: The customer block feature is locked and remains locked until a hardware reset is performed 0: No customer block feature is locked	1, [11]	Read-only	Non-standard	0	0 to 1
FG_BKUP_FLAG, 0x0F00	1: The fuel gauge is in learning backup mode 0: The fuel gauge is not in learning backup mode Use FG_BKUP_ENABLE to exit/enter this mode.	1, [12]	Read-only	Non-standard	0	0 to 1
LEDS_ON_BTN_FLAG, 0x0F00	1: The LEDs are on due to the push-button 0: No LEDs are on due to the push-button	1, [13]	Read-only	Non-standard	0	0 to 1
LEDS_ON_CHG_FLAG, 0x0F00	1: The LEDs are on due to the charge current being detected 0: The LEDs are not on due to charge current being detected	1, [14]	Read-only	Non-standard	0	0 to 1
LEDS_CHG_FLAG, 0x0F00	1: The LED controller considers the fuel gauge to be in a charge state 0: The LED controller does not consider the fuel gauge to be in a charge state	1, [15]	Read-only	Non-standard	0	0 to 1

Fuel Gauge Settings

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
EXE_TIME, 0x1000	Sets the fuel gauge execution time interval.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.1s	4s	0.5s to 16s
WEXE_TIME_REST, 0x1001	Updates the most time-consuming functions when the fuel gauge is resting each (WEXE_TIME_REST x EXE_TIME), instead of each EXE_TIME. The maximum allowed value for the execution period of this functions is 32s, so if the fuel gauge is set such that (WEXE_TIME_REST x EXE_TIME) is longer than 32s, then the period used is the multiple of EXE_TIME, that is close to but shorter than 32s.	5, [4:0]	R/W	8-bit unsigned integer LSB = 1	4	1 to 16
DIS_ITH, 0x1002	Sets the discharge status current threshold.	16, [15:0]	R/W	16-bit unsigned integer LSB = 1mA	25 mA	0mA to 65535mA
CHG_ITH, 0x1004	Sets the charge status current threshold.	16, [15:0]	R/W	16-bit unsigned integer LSB = 1mA	25 mA	0mA to 65535mA
SOC_DMAX, 0x1006	Sets the maximum SOC for the charge and discharge statuses.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.00005%/s	0.07 %/s	0.00005%/s to 2%/s
SOC_DMAX_REST, 0x1008	Sets the maximum SOC slope for the resting status.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.00005%/s	0.001 %/s	0%/s to 2%/s
VRDG_PACK_EN, 0x1040	Enables the VRDG_PACK input.	1, [0]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
IRDG_PACK_EN, 0x1040	Enables the IRDG_PACK input.	1, [1]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
IRDG_CELLS_EN, 0x1040	Enables the IRDG_CELLx inputs.	1, [2]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
CCRDG_EN, 0x1040	Enables the CCRDG input.	1, [3]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
TRDG_AMB_EN, 0x1040	Enables the TRDG_AMB input.	1, [4]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
SOH_LRN_EN, 0x1041	Enables SOH learning.	1, [0]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
RESR_LRN_EN, 0x1041	Enables ESR learning.	1, [2]	R/W	Control Enable = 1 Disable = 0	1	0 to 1

RCXN_CELLS_LRN_EN, 0x1041	Enables ESR learning.	1, [3]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
ICHG_CC_LRN_EN, 0x1041	Enables charge CC learning.	1, [4]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
ICHG_END_LRN_EN, 0x1041	Enables charge termination current learning.	1, [5]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
VCHG_CV_LRN_EN, 0x1041	Enables charge CV learning.	1, [6]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
IDIS_AVG_LRN_EN, 0x1041	Enables discharge average current learning.	1, [7]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
IDIS_END_LRN_EN, 0x1042	Enables discharge termination current learning.	1, [0]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
IDIS_END_LRN_CONT_EN, 0x1042	Enables continuous discharge termination current learning.	1, [1]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
THRM_MDL_EN, 0x1042	Enables continuous discharge termination current learning.	1, [2]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
HCONV_LRN_EN, 0x1042	Enables continuous discharge termination current learning.	1, [3]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
HCONV_LRN_CONT_EN, 0x1042	Enables continuous discharge termination current learning.	1, [4]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
PCHG_SHW_EN, 0x1042	Sets the PCHG_SHW default value.	1, [7]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
PDIS_SHW_EN, 0x1043	Sets the PDIS_SHW default value.	1, [0]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
IT_DONE_INTR_EN, 0x1080	Enables an IT_DONE_INTR (iteration complete) interrupt.	1, [0]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
STATUS_INTR_EN, 0x1080	Enables a STATUS_INTR (status changes) interrupt.	1, [1]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
EMPTY_LIM_INTR_EN, 0x1080	Enables an EMPTY_LIM_INTR (empty limiting factor change) interrupt.	1, [2]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
FULL_LIM_INTR_EN, 0x1080	Enables a FULL_LIM_INTR (full limiting factor changed) interrupt.	1, [3]	R/W	Control Enable = 1 Disable = 0	1	0 to 1

SOC_PACK_RSLT_INTR_EN, 0x1080	Enables a SOC_PACK_RSLT_INTR (pack SOC result changed) interrupt.	1, [4]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
OT_WARN_INTR_EN, 0x1080	Enables an OT_WARN_INTR interrupt.	1, [5]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
IDIS_AVG_INTR_EN, 0x1080	Enables an IDIS_AVG_INTR (average discharge current learning) interrupt.	1, [6]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
IDIS_END_INTR_EN, 0x1080	Enables an IDIS_END_INTR (discharge termination current learning) interrupt.	1, [7]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
ICHG_CC_INTR_EN, 0x1080	Enables an ICHG_CC_INTR (charge CC current learning) interrupt.	1, [8]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
ICHG_END_INTR_EN, 0x1080	Enables an ICHG_END_INTR (charge termination current learning) interrupt.	1, [9]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
VCHG_CV_INTR_EN, 0x1080	Enables a VCHG_CV_INTR (charge CV learning) interrupt.	1, [10]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
SORESР_CELLS_INTR_EN, 0x1080	Enables an SORESР_CELLS_INTR (ESR learning) interrupt.	1, [11]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
RCXN_CELLS_INTR_EN, 0x1080	Enables an RCXN_CELLS_INTR (cell resistance learning) interrupt.	1, [12]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
HCONV_INTR_EN, 0x1080	Enables an HCONV_INTR (heat transfer coefficient learning) interrupt.	1, [13]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
SOH_CELLS_INTR_EN, 0x1080	Enables an SOH_CELLS_INTR (cell SOH learning) interrupt.	1, [14]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
PDIS_LIM_INTR_EN, 0x1080	Enables a PDIS_LIM_INTR (discharge power limiting factor change) interrupt.	1, [16]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
PCHG_LIM_INTR_EN, 0x1080	Enables a PCHG_LIM_INTR (charge power limiting factor change) interrupt.	1, [17]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
VCELL_MAX, 0x10C0	Sets the maximum voltage accepted at the cell level.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mV	4200mV	0mV to 6553.5mV
VCELL_MAX_MRGN, 0x10C2	Sets the maximum cell voltage margin.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5mV	5mV	0mV to 127.5mV
VCELL_MIN, 0x10C3	Sets the minimum voltage accepted at the cell level.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mV	3000mV	0mV to 6553.5mV

VCELL_MIN_MRGN, 0x10C5	Sets the minimum cell voltage margin.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5mV	5mV	0mV to 127.5mV
VPACK_MAX, 0x10C6	Sets the maximum voltage that the pack can accept. This value is used for charge power estimate. The pack float voltage represents the maximum voltage that the battery pack can reach in a charging scenario. It should be set the be equal to or exceed the charging system's CV.	16, [15:0]	R/W	16-bit unsigned integer LSB = 2mV	66800mV	0mV to 131070mV
VPACK_MAX_MRGN, 0x10C8	Sets the pack's maximum pack voltage margin.	8, [7:0]	R/W	8-bit unsigned integer LSB = 4mV	48mV	0mV to 1020mV
VPACK_MIN, 0x10C9	Sets the pack empty voltage, which represents the lowest usable pack voltage. This is the voltage at which the application considers the battery pack to be completely discharged and stops operation.	16, [15:0]	R/W	16-bit unsigned integer LSB = 2mV	48800mV	0mV to 131070mV
VPACK_MIN_MRGN, 0x10CB	Sets the margin for the power learning algorithm, which is applied to the pack empty voltage.	8, [7:0]	R/W	8-bit unsigned integer LSB = 4mV	48mV	0mV to 1020mV
ICHG_MAX, 0x1100	Sets the maximum charge current that the pack can accept.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.001 C-rate	1 C-rate	0.001 C-rate to 65.535 C-rate
ICHG_MAX_MRGN, 0x1102	Sets the maximum charge current margin.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.002 C-rate	0.02 C-rate	0 C-rate to 0.51 C-rate
IDIS_MAX, 0x1103	Sets the maximum discharge current that the pack can accept.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.001 C-rate	2 C-rate	0.001 C-rate to 65.535 C-rate
IDIS_MAX_MRGN, 0x1105	Sets the maximum discharge current margin.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.002 C-rate	0.02 C-rate	0 C-rate to 0.51 C-rate
RCXN_PACK, 0x1140	Sets the connection resistance between the battery and the battery management system (BMS) terminals.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	10mΩ	0mΩ to 6553.5mΩ
RBMS_HSIDE, 0x1142	Sets the BMS's high-side resistance.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	4mΩ	0mΩ to 6553.5mΩ
RBMS_LSIDE, 0x1144	Sets the BMS's low-side resistance.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	2mΩ	0mΩ to 6553.5mΩ
RCXN_CELL1, 0x1146	Sets the connection resistance between cell 1's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL2, 0x1148	Sets the connection resistance between cell 2's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL3, 0x114A	Sets the connection resistance between cell 3's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL4, 0x114C	Sets the connection resistance between cell 4's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ

RCXN_CELL5, 0x114E	Sets the connection resistance between cell 5's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL6, 0x1150	Sets the connection resistance between cell 6's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL7, 0x1152	Sets the connection resistance between cell 7's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL8, 0x1154	Sets the connection resistance between cell 8's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL9, 0x1156	Sets the connection resistance between cell 9's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL10, 0x1158	Sets the connection resistance between cell 10's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL11, 0x115A	Sets the connection resistance between cell 11's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL12, 0x115C	Sets the connection resistance between cell 12's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL13, 0x115E	Sets the connection resistance between cell 13's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL14, 0x1160	Sets the connection resistance between cell 14's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL15, 0x1162	Sets the connection resistance between cell 15's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
RCXN_CELL16, 0x1164	Sets the connection resistance between cell 16's terminals and its corresponding voltage-sensing probes.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.1mΩ	1mΩ	0mΩ to 6553.5mΩ
TSS_CELL1, 0x11C0	Sets cell 1's temperature sensor source.	2, [1:0]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL2, 0x11C0	Sets cell 2's temperature sensor source.	2, [3:2]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL3, 0x11C0	Sets cell 3's temperature sensor source.	2, [5:4]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL4, 0x11C0	Sets cell 4's temperature sensor source.	2, [7:6]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL5, 0x11C1	Sets cell 5's temperature sensor source.	2, [1:0]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4

TSS_CELL6, 0x11C1	Sets cell 6's temperature sensor source.	2, [3:2]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL7, 0x11C1	Sets cell 7's temperature sensor source.	2, [5:4]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL8, 0x11C1	Sets cell 8's temperature sensor source.	2, [7:6]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL9, 0x11C2	Sets cell 9's temperature sensor source.	2, [1:0]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL10, 0x11C2	Sets cell 10's temperature sensor source.	2, [3:2]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL11, 0x11C2	Sets cell 11's temperature sensor source.	2, [5:4]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL12, 0x11C2	Sets cell 12's temperature sensor source.	2, [7:6]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL13, 0x11C3	Sets cell 13's temperature sensor source.	2, [1:0]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL14, 0x11C3	Sets cell 14's temperature sensor source.	2, [3:2]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL15, 0x11C3	Sets cell 15's temperature sensor source.	2, [5:4]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TSS_CELL16, 0x11C3	Sets cell 16's temperature sensor source.	2, [7:6]	R/W	Non-standard LSB = 1 Offset = 1	1	1 to 4
TCHG_MAX, 0x11C4	Sets the application's maximum allowed temperature during charging.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5°C	50°C	-30°C to +97.5°C
TDIS_MAX, 0x11C5	Sets the application's maximum allowed temperature during discharging.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5°C	60°C	-30°C to +97.5°C
HCONV_PACK, 0x11C6	Sets the battery pack's heat transfer coefficient.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.01W/(m ² ×K)	23W/(m ² ×K)	0.01 W/(m ² ×K) to 655.35W/(m ² ×K)

NCELLS_SER, 0x1200	Sets the number of series-connected cells in the battery pack.	5, [4:0]	R/W	8-bit unsigned integer LSB = 1	16	2 to 16
NCELLS_PAR, 0x1201	Sets the number of parallel-connected cells in the battery pack.	8, [7:0]	R/W	8-bit unsigned integer LSB = 1	1	1 to 255
NTSS, 0x1202	Sets the number of temperature sensors in the battery pack.	3, [2:0]	R/W	8-bit unsigned integer LSB = 1	1	1 to 4
IDIS_AVG_SET, 0x1280	Sets the nominal average discharge current (i.e. IDIS_AVG).	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.001 C-rate	1 C-rate	0.001 C-rate to 65.535 C-rate
IDIS_END_SET, 0x1282	Sets the nominal discharge termination current (i.e. IDIS_END).	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.001 C-rate	1 C-rate	0.001 C-rate to 65.535 C-rate
ICHG_CC_SET, 0x12C0	Sets the nominal charge constant current (i.e. ICHG_CC). It should be set to the nominal current that applied by the external charger to the battery pack while in the charge CC region.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.001 C-rate	0.5 C-rate	0.001 C-rate to 65.535 C-rate
ICHG_END_SET, 0x12C2	Sets the nominal charge termination current (i.e. ICHG_END). It should be set to the nominal current, which is used to detect the end of charge while in the charge CV region.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.001 C-rate	0.1 C-rate	0.001 C-rate to 65.535 C-rate
ICHG_END_MRGN, 0x12C4	Sets the charge termination current (i.e. ICHG_END_SET) margin.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.001 C-rate	0.005 C-rate	0 C-rate to 0.255 C-rate
VCHG_CV_SET, 0x12C5	Sets the nominal charge constant voltage (i.e. VCHG_CV). This value should be set to the nominal voltage, which is applied to the battery pack by the external charger during CV charge.	16, [15:0]	R/W	16-bit unsigned integer LSB = 2mV	66400mV	0mV to 131070mV
EMPTY_RUNTIME_FILTER, 0x1304	Sets the filter time constant for the remaining time-to-empty (i.e. EMPTY_RUNTIME). Increasing EMPTY_RUNTIME_FILTER results in a smoother estimate at the tradeoff of an increased phase delay.	8, [7:0]	R/W	8-bit unsigned integer LSB = 1s	60s	0s to 255s
EMPTY_DTEMP_FILTER, 0x1305	Sets the filter time constant for the predicted remaining time-to-empty (i.e. EMPTY_RUNTIME).	8, [7:0]	R/W	8-bit unsigned integer LSB = 1s	60s	0s to 255s
FULL_RUNTIME_FILTER, 0x1345	Sets the filter time constant for the remaining time-to-full (i.e. FULL_RUNTIME).	8, [7:0]	R/W	8-bit unsigned integer LSB = 1s	60s	0s to 255s
FULL_DTEMP_FILTER, 0x1346	Sets the filter time constant for the predicted temperature-to-full (i.e. FULL_DTEMP).	8, [7:0]	R/W	8-bit unsigned integer LSB = 1s	60s	0s to 255s
ICHG_CC_LRN_RNG, 0x1380	If ICHG_CC_LRN_EN is enabled, these bits set the charge CC (i.e. ICHG_CC) learning range.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5%	10%	0% to 100%
ICHG_CC_LRN_SOCTH, 0x1381	Sets the SOC threshold for charge CC learning (i.e. ICHG_CC).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5 %	80%	0% to 100%
ICHG_CC_LRN_DITH, 0x1382	Sets the charge current derivative threshold for charge CC learning (i.e. ICHG_CC).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01 mA/s	0.1mA/s	0mA/s to 2.55mA/s

ICHG_CC_LRN_CNTRTH, 0x1384	Sets the sample counter threshold for charge CC learning (i.e. ICHG_CC).	8, [7:0]	R/W	8-bit unsigned integer LSB = 1 sample(s)	20 sample(s)	0 to 255 sample(s)
ICHG_END_LRN_RNG, 0x13C0	If ICHG_END_LRN_EN enabled, these bits set the charge termination current (i.e. ICHG_END) learning range.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5 %	10%	0% to 100%
ICHG_END_LRN_SOCTH, 0x13C1	Sets the SOC threshold for charge termination current learning (i.e. ICHG_END).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5 %	80%	0% to 100%
ICHG_END_LRN_ITH, 0x13C2	Sets the charge current threshold for charge termination current learning, (i.e. ICHG_END).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01 C-rate	0.01 C-rate	0 C-rate to 2.55 C-rate
ICHG_END_LRN_DVTH, 0x13C3	Sets the charge voltage derivative threshold for charge termination current learning (i.e. ICHG_END).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01mV/s	0.1mV/s	0mV/s to 2.55mV/s
VCHG_CV_LRN_RNG, 0x1400	If VCHG_CV_LRN_EN is enabled, these bits set the charge CV (i.e. VCHG_CV) learning range.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5%	10%	0% to 100%
VCHG_CV_LRN_SOCTH, 0x1401	Sets the SOC threshold for charge CV learning (i.e. VCHG_CV).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5%	80%	0% to 100%
VCHG_CV_LRN_ITH, 0x1402	Sets the charge current threshold for charge CV learning, (i.e. VCHG_CV).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01 C-rate	0.01 C-rate	0 C-rate to 25.5 C-rate
VCHG_CV_LRN_DVTH, 0x1403	Sets the charge voltage derivative threshold for charge CV learning (i.e. VCHG_CV).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01mV/s	0.1mV/s	0mV/s to 2.55mV/s
IDIS_AVG_LRN_RNG, 0x1440	If IDIS_END_LRN_EN is enabled, these bits set the discharge termination current (i.e. IDIS_END) learning range.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5%	100%	0% to 100%
IDIS_AVG_LRN_ITH, 0x1441	Sets the discharge current threshold for learnings (i.e. IDIS_AVG and IDIS_END).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01 C-rate	0.05 C-rate	0 C-rate to 2.55 C-rate
IDIS_AVG_LRN_FILTER, 0x1442	Sets the filter time constant for the discharge current learnings (i.e. IDIS_AVG and IDIS_END).	8, [7:0]	R/W	8-bit unsigned integer LSB = 1s	10s	0s to 255s
IDIS_END_LRN_RNG, 0x1480	If IDIS_END_LRN_EN is enabled, these bits set the discharge termination current (i.e. IDIS_END) learning range.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5%	10%	0% to 100%
IDIS_END_LRN_SOCTH, 0x1481	If IDIS_END_LRN_EN is enabled, these bits set the SOC discharge termination current (i.e. IDIS_END) learning threshold.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5%	50%	0% to 100%
IDIS_END_LRN_KPEAK, 0x1482	If IDIS_END_LRN_EN is enabled, these bits set the discharge termination current (i.e. IDIS_END) learning peak current gain.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5%	70%	0% to 100%
IDIS_END_LRN_ITH, 0x1483	Sets the discharge termination current threshold for learnings (i.e. IDIS_AVG, IDIS_END).	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01 C-rate	0.05 C-rate	0 C-rate to 2.55 C-rate
IDIS_END_LRN_FILTER, 0x1484	Sets the filter time constant for discharge current learnings (i.e. IDIS_AVG and IDIS_END).	8, [7:0]	R/W	8-bit unsigned integer LSB = 1s	10 s	0s to 255s
SOH_LRN_K, 0x14C0	If SOH_LRN_EN is enabled, these bits set the SOH learning gain.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.001	0.1	0 to 0.255
SOH_LRN_DMAX, 0x14C1	If SOH_LRN_EN is enabled, these bits set the maximum increase for SOH learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.1%	1%	0% to 25.5%

SOH_LRN_DMAX, 0x14C1	If SOH_LRN_EN is enabled, these bits set the maximum increase for SOH learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.1%	1%	0% to 25.5%
SOH_LRN_DMIN, 0x14C2	If SOH_LRN_EN is enabled, these bits set the maximum decrease for SOH learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.1%	1%	0% to 25.5%
SOH_LRN_MAX, 0x14C3	If SOH_LRN_EN is enabled, these bits set the maximum value for SOH learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 1%	110%	100% to 200%
SOH_LRN_MIN, 0x14C4	If SOH_LRN_EN is enabled, these bits set the minimum value for SOH learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 1%	80%	0% to 100%
SOH_LRN_TMAX, 0x14C5	If SOH_LRN_EN is enabled, these bits set the maximum temperature for SOH learning	8, [7:0]	R/W	8-bit signed, 2-comp integer LSB = 1°C	30°C	-128°C to +127°C
SOH_LRN_TMIN, 0x14C6	If SOH_LRN_EN is enabled, these bits set the minimum temperature for SOH learning	8, [7:0]	R/W	8-bit signed, 2-comp integer LSB = 1°C	10°C	-128°C to +127°C
SOH_LRN_IMIN, 0x14C7	If SOH_LRN_EN is enabled, these bits set the minimum current for SOH learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01 C-rate	0.1 C-rate	0 C-rate to 2.55 C-rate
SOH_LRN_IMAX, 0x14C8	If SOH_LRN_EN is enabled, these bits set the maximum current for SOH learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01 C-rate	2 C-rate	0 C-rate to 2.55 C-rate
RESR_LRN_DITH, 0x1540	Sets the minimum current variation for equivalent series resistance learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01 C-rate/s	0.5 C-rate/s	0 C-rate/s to 2.55 C-rate/s
RESR_LRN_DRSTD, 0x1541	Sets the maximum (standard) resistance variation for ESR learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.1%	2.5%	0% to 25.5%
RESR_LRN_DR_EXT, 0x1542	Sets the maximum (extended) resistance variation for ESR learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.1 %	10%	0% to 25.5%
RESR_LRN_NHI_T2EXT, 0x1543	Sets the number of times the standard resistance variation must be reached before using the extended resistance variation for ESR learning.	4, [3:0]	R/W	8-bit unsigned integer LSB = 1	4	0 to 8
RCXN_CELLS_LRN_NAVG, 0x1580	Sets the number of events required for pack connection resistance learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 1 event	100 event(s)	1 to 255 event(s)
RCXN_CELLS_LRN_DITH, 0x1581	Sets the current derivative threshold for pack connection resistance learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01 C-rate/s	0.5 C-rate/s	0 to 2.55 C-rate/s
RCXN_CELLS_LRN_RMIN, 0x1582	Sets the minimum resistance for pack connection resistance learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 1mΩ	0mΩ	0mΩ to 255mΩ
RCXN_CELLS_LRN_RMAX, 0x1583	Sets the maximum resistance for pack connection resistance learning.	8, [7:0]	R/W	8-bit unsigned integer LSB = 1mΩ	20mΩ	0mΩ to 255mΩ
HCONV_LRN_K, 0x15C0	Sets the heat transfer coefficient gain.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.1W/(m ² × K ²)	1W/(m ² × K ²)	0W/(m ² × K ²) to 25.5W/(m ² × K ²)
HCONV_LRN_RNG, 0x15C1	Sets the heat transfer coefficient range.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5%	10%	0% to 100%
HCONV_LRN_DTIMETH, 0x15C2	Sets the heat transfer coefficient learning time derivative threshold.	8, [7:0]	R/W	8-bit unsigned integer LSB = 1s	10s	0s to 255s

HCONV_LRN_DTEMPH, 0x15C3	Sets the heat transfer coefficient learning temperature derivative threshold.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.01°C	0.2°C	0°C to 2.55°C
--------------------------	-------------------------------------------------------------------------------	----------	-----	----------------------------------------	-------	---------------

Fuel Gauge Model

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
MDLCELL_MFR, 0x2000	Sets the cell manufacturer.	128, [127:0]	R/W	ASCII character(s)	Default	-
MDLCELL_TYPE, 0x2010	Sets the cell type model.	128, [127:0]	R/W	ASCII character(s)	Default	-
MDLCELL_QNOM, 0x2020	Sets the nominal capacity of the cell, which is reported by the manufacturer.	16, [15:0]	R/W	16-bit unsigned integer LSB = 5mAh	2500mAh	5mAh to 32767mAh
MDLCELL_CP, 0x2028	Sets the cell's specific heat.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.001J/(g x K)	0.85J/(g x K)	0.001J/(g x K) to 65.535J/(g x K)
MDLCELL_MASS, 0x202A	Sets the cell mass.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.5g	45g	0.5g to 32767.5g
MDLCELL_AREA, 0x202C	Sets the cell surface area.	16, [15:0]	R/W	16-bit unsigned integer LSB = 5mm ²	4262mm ²	1mm ² to 327675mm ²
MDLINFO_ICHG_MAX, 0x2098	Sets the maximum charge current that the cell can handle, according to the manufacturer.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.001 C-rate	1 C-rate	0 C-rate to 65.535 C-rate
MDLINFO_IDIS_MAX, 0x209A	Sets the maximum discharge current that the cell can handle, according to the manufacturer.	16, [15:0]	R/W	16-bit unsigned integer LSB = 0.001 C-rate	2 C-rate	0 C-rate to 65.535 C-rate
MDLINFO_TCHG_MIN, 0x209C	Sets the minimum temperature that the cell can handle, according to the manufacturer.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5°C	0°C	-30°C to +97.5°C
MDLINFO_TCHG_MAX, 0x209D	Sets the maximum temperature that the cell can handle, according to the manufacturer.	8, [7:0]	R/W	8-bit unsigned integer LSB = 0.5°C	50°C	-30°C to +97.5°C
MDLINFO_QMEAS, 0x20A0	Sets the capacity measured in the cell characterization test.	16, [15:0]	R/W	16-bit unsigned integer LSB = 5mAh	2437mAh	5mAh to 32767mAh

LED Settings

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
LEDS_ON_MAN, 0x4000	1: The LEDs are controlled manually using the dedicated register bits 0: The LEDs are directly controlled to report the SOC	1, [0]	R/W	Control Enable = 1 Disable = 0	0	0 to 1
LEDS_ON_CHG, 0x4000	1: The LEDs display the pack SOC while charging, if the manual LED controls are set to 0 0: The LEDs do not display the pack SOC while the charging and manual LED controls are set to 0	1, [1]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
LEDS_ON_BTN, 0x4000	1: The LEDs display the pack SOC after the LED push-button is pressed if the manual LED controls are set to 0 0: The LEDs do not display the pack SOC after the LEDs push-button is pressed and the manual LED controls are set to 0	1, [2]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
LED1_ON, 0x4000	1: If manual LED control is set to 1 the LED turns on 0: If manual LED control is set to 1 the LED turns off	1, [3]	R/W	Control On = 1 Off = 0	0	0 to 1

LED2_ON, 0x4000	1: If manual LED control is set to 1 the LED turns on 0: If manual LED control is set to 1 the LED turns off	1, [4]	R/W	Control On = 1 Off = 0	0	0 to 1
LED3_ON, 0x4000	1: If manual LED control is set to 1 the LED turns on 0: If manual LED control is set to 1 the LED turns off	1, [5]	R/W	Control On = 1 Off = 0	0	0 to 1
LED4_ON, 0x4000	1: If manual LED control is set to 1 the LED turns on 0: If manual LED control is set to 1 the LED turns off	1, [6]	R/W	Control On = 1 Off = 0	0	0 to 1
LED5_ON, 0x4000	1: If manual LED control is set to 1 the LED turns on 0: If manual LED control is set to 1 the LED turns off	1, [7]	R/W	Control On = 1 Off = 0	0	0 to 1
LED_TRANS, 0x4001	Sets the deglitch time to control when the LED turns on/off upon transitioning between charge and discharge mode.	7, [6:0]	R/W	8-bit unsigned integer LSB = 0.1s	4s	0s to 12.7s
LEDS_ON_ TIME, 0x4002	Sets the time during which the LEDs are on after pressing the LED push-button.	4, [3:0]	R/W	8-bit unsigned integer LSB = 1s Offset = 1s	5s	1s to 16s

I²C Settings and Info

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
I2C_ADDRESS, 0x4100	Selects the slave I ² C address of the device.	7, [6:0]	R/W	8-bit unsigned integer LSB = 1	8	0 to 127
I2C_CRC_EN, 0x4100	1: Enable CRC for I ² C communication. Only write commands with the correct CRC are accepted. The response after a read command includes the 4 CRC bytes at the end 0: Disable CRC for I ² C communication. Write commands with no CRC bytes (or with the correct CRC) are accepted. The response after a read command does not include the 4 CRC bytes	1, [7]	R/W	Control Enable = 1 Disable = 0	1	0 to 1
I2C_CHANNEL, 0x4200	This RO register returns to the master, and the I ² C channel is used for the current transaction. 1: The master is connected to the secondary I ² C channel 0: The master is connected to the primary I ² C channel	1, [0]	Read-only	Boolean true/false	0	0 to 1
I2C_CHAN_SEL, 0x4200	Returns the state of the I2C_SEL pin, which determines the selected I ² C channel to accept write operations. 1: The secondary I ² C channel is selected for write operations 0: The primary I ² C channel is selected for write operations	1, [1]	Read-only	Boolean true/false	0	0 to 1

Customer Block

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
CUST_BLOCK_PASSWORD, 0x5000	<p>Sets the password to allow editing to the customer block feature. To set a new password, write a value to this register while in configuration mode when CUST_BLOCK_PASS_EDIT_EN = 1. After the new password is set, CUST_BLOCK_PASS_EDIT_EN resets to 0. When writing a new value for the password, only the four password bytes must be written, so the address used must be 0x5000, and the data length must be 4. Users must exit configuration mode for the new password to be stored in the fuel gauge's NVM.</p> <p>To enable the customer block feature or the editing of the password, send a write command to address 0x5000 with a data length of 3. This command should contain the correct password and the correct values for CUST_BLOCK_EN and CUST_BLOCK_PASS_EDIT_EN.</p> <p>The content of this register can only be read when CUST_BLOCK_FLAG = 0.</p> <p>This register can only be written when CONFIG_MODE_FLAG = 1.</p>	32, [31:0]	R/W	32-bit unsigned integer LSB = 1	4294967295	0 to 4294967295
CUST_BLOCK_EN, 0x5004	<p>Enables the customer block feature. To enable the customer block feature, send a write command to address 0x5000, with a data length of 5. This command should contain the correct password, and the correct value for this register must be sent.</p> <p>The CUST_BLOCK_FLAG flag is a mirror of this register.</p> <p>The content of this register can only be read when CUST_BLOCK_FLAG = 0.</p> <p>This register can only be written when CONFIG_MODE_FLAG = 1.</p>	1, [0]	R/W	Control Enable = 1 Disable = 0	0	0 to 1
CUST_BLOCK_PASS_EDIT_EN, 0x5004	<p>Enables customer block password editing. To enable the customer block feature, send a write command to address 0x5000, with a data length of 5. This command should contain the correct password, and the correct value for this register must be sent.</p> <p>This register can only be set when CUST_BLOCK_FLAG = 0; otherwise, it stays at 0.</p> <p>The content of this register can only be read when CUST_BLOCK_FLAG = 0.</p> <p>This register can only be written when CONFIG_MODE_FLAG = 1.</p>	1, [1]	R/W	Control Enable = 1 Disable = 0	0	0 to 1

IC Version

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
IC_VER, 0x6100	Returns the IC version. 42790: 2 to 16 cells in series with LED support 42792: 2 to 16 cells in series cells 42795: 2 to 10 cells with LED support 42797: 2S to 10 in series cells 42791: 2 to 16 cells in series with resistance detection and a thermal model	40, [39:0]	Read-only	ASCII character(s)	42791	-
SP_CSTR_REQ_VER, 0x6109	Returns the optional special request from the costumer.	32, [31:0]	Read-only	ASCII character(s)	0000	-

Commands

Name, Address	Description	Bit Length, Position	Type	Encoding	Decoded Default Value	Range
RST_CMD, 0x7FFF	Resets the fuel gauge calculations. 0x01: Reset the fuel gauge. This is a self-clearing function	8, [7:0]	Write-only	Active high command 1 = execute LSB = 1	0	0 to 255
EXE_CMD, 0x7FFE	Triggers the fuel gauge calculations. The system MCU is responsible for periodically writing this register to trigger an SOC update. This function should be triggered after providing all the updated voltage and current readings that are used to produce the updated SOC estimate. 0x01: Trigger a fuel gauge update refresh	8, [7:0]	Write-only	Active high command 1 = Execute LSB = 1	0	0 to 255
EDIT_CONFIG_CMD, 0x7FFD	0x01: The fuel gauge settings can be edited	8, [7:0]	Write-only	Active high command 1 = Execute LSB = 1	0	0 to 255
END_EDIT_CONFIG_CMD, 0x7FFC	0x01: The fuel gauge settings cannot be edited	8, [7:0]	Write-only	Active high command 1 = Execute LSB = 1	0	0 to 255
CONFIG_MODE_CMD, 0x7FFB	Directs the fuel gauge to enter configuration mode (cell profile, battery pack, and algorithm tuning). 0x01: Enter configuration mode	8, [7:0]	Write-only	Active high command 1 = Execute LSB = 1	0	0 to 255
CONFIG_EXIT_CMD, 0x7FFA	Directs the fuel gauge to exit configuration mode (saves configuration values to flash) and reset. If not in configuration mode, the device stores the fuel gauge and LED settings from the volatile memory to the NVM. 0x01: Exit configuration mode. The new configuration is stored in the NVM	8, [7:0]	Write-only	Active high command 1 = Execute LSB = 1	0	0 to 255

<p>CONFIG_RST_CMD, 0x7FF9</p>	<p>The configuration values are re-initialized to the default values and the fuel gauge calculations are reset.</p> <p>0x01: Reset the configuration. This is a self-clearing function</p>	<p>8, [7:0]</p>	<p>Write-only</p>	<p>Active high command</p> <p>1 = Execute</p> <p>LSB = 1</p>	<p>0</p>	<p>0 to 255</p>
<p>LOG_RST_CMD, 0x7FF8</p>	<p>Re-initializes lifetime logging.</p> <p>0x01: Re-initialize the lifetime log registers. This is a self-clearing function</p>	<p>8, [7:0]</p>	<p>Write-only</p>	<p>Active high command</p> <p>1 = Execute</p> <p>LSB = 1</p>	<p>0</p>	<p>0 to 255</p>

provided by CODICO®

APPLICATION INFORMATION

CORE ALGORITHM

The fuel gauge core algorithm accurately estimates core cell-level and pack-level parameters. These core parameters can be found in the Fuel Gauge Output register map.

Cell Mathematical Model

Cell dynamics are influenced by multiple factors, such as chemistry, SOC, current, and temperature. A mathematical model that captures the cell's most important dynamics is required to accurately measure internal variables.

Cell mathematical models are provided by MPS. These models are either from a database or they are a result of the cell characterization routine.

Cell State-of-Charge (SOC)

Cell SOC (SOC_ABS_CELLx) refers to the cell capacity that is currently available, as a function of the rated capacity. SOC is an unknown, internal variable that cannot be directly measured, meaning it must be estimated using available measurements. The MPF42791 uses voltage, current, and temperature measurements observed over time to produce accurate SOC estimates across a wide range of operating conditions.

Empty State-of-Charge (SOC)

Empty SOC (EMPTY_SOC_CELLx) refers to the SOC level at which the battery pack is unable to discharge further without reaching the voltage cutoff limits defined in VPACK_EMPTY. The empty SOC prediction relies on the operating conditions of the different cells, as well as the discharge current supplied to the load, which is specific to each application.

In addition, the MPF42791 can predict whether the battery pack discharge is limited by the pack or one of the cells (the cell ID is provided). This is extremely important for accurate empty SOC estimation in unbalanced packs, since the fuel gauge must track the condition that limits the battery pack discharge.

Full State-of-Charge (SOC)

Full SOC (FULL_SOC_CELLx) refers to the SOC level at which the battery pack is unable to charge further without leaving the safe operating

area (SOA). The full SOC prediction relies on the operating conditions of the different cells, as well as the constant-current/constant-voltage (CC/CV) charging sequence, which is specific to each application.

The MPF42791 can predict whether the battery pack charge is limited by the pack or one of the cells (the cell ID is provided). This is extremely important for accurate full SOC estimation in unbalanced packs, since the fuel gauge must track the condition that limits the battery pack charge.

Thermal Modeling

The MPF42791 incorporates battery thermal modeling, which is extremely important to account for battery self-heating.

The internal resistance of each cell causes the cell's temperature to rise during charge and discharge due to the Joule heating effect. As temperature of cells increases, internal resistance decreases and this can dramatically impact performance, especially at low temperatures.

The ability to predict this temperature rise allows the fuel gauge to determine state-of-charge more accurately.

Pack State-of-Charge (SOC)

Pack SOC (SOC_PACK) provides the capacity, which is a function of the available capacity given the actual pack operating conditions. Pack SOC relies on cell-level quantities and tracks the remaining capacity that the battery can charge or discharge without reaching the cutoff limits.

Pack SOC can be considered the most vital estimate since it is typically the value shown to the application end user.

Pack Unavailable State-of-Charge (SOC)

Pack unavailable SOC (SOC_PACK_UNAVBL) refers to the capacity that is not available due to the actual pack operating conditions (e.g. mismatched cells and battery pack configurations). Pack unavailable SOC provides the capacity that the battery cannot use without violating the defined SOA.

INDICATORS

In addition to the core parameters, an extensive set of fuel gauge indicators are provided, based on the internal battery estimates. These indicators can be found in the Fuel Gauge Output register map.

Remaining Time-to-Empty

Remaining time-to-empty (EMPTY_RUNTIME) refers to how much time is left until the battery pack reaches the empty state while assuming the application-specific discharge current. This estimate informs the user of the remaining runtime until the pack reaches 0% SOC.

Remaining Time-to-Full

Remaining time-to-full (FULL_RUNTIME) refers to how much time is left until the battery pack reaches the cutoff limits using the application-specific charge parameters (i.e., the CC and CV levels). This estimate informs the user of the remaining charge time until the pack reaches 100% SOC.

Maximum Discharge Power

The maximum discharge power (PDIS) refers to how much power the pack can deliver to the load without reaching the pack empty levels and leaving the SOA.

The MPF42791 can predict whether the limiting factor under the maximum discharge power is caused by the pack or one of the cells (the cell ID is provided).

Maximum Charge Power

The maximum charge power (PCHG) refers to how much power the pack can accept for charging without breaching the cutoff limits.

The MPF42791 can predict whether the limiting factor under the maximum charge power is caused by the pack or one of the cells (the cell ID is provided).

LEARNINGS

The MPF42791 includes the ability to learn and adjust key fuel gauge parameters, allowing for autonomous fine-tuning of the algorithm. This also provides a method to account for aging to keep estimates accurate across the device's lifetime.

Charge Constant Current (CC)

The charge CC learning feature (ICHG_CC_LRN) refines the initial charge CC value defined by the user. This smart adjustment compensates for when the charge CC deviates from its nominal settings, such as when there are production tolerances to the charging system. This feature minimizes the need for tuning while maintaining optimal SOC accuracy. The learning can be completed and leveraged within the same charge cycle.

Charge Termination Current

The charge termination current learning (ICHG_END_LRN) feature refines the initial charge termination current value defined by the user. This smart adjustment compensates for when the charge termination current deviates from its nominal settings, such as when there are production tolerances to the charging system.

Charge termination current smart adjustments are applied in subsequent charge cycles following the cycle in which the learning occurred.

Charge Constant Voltage (CV)

The charge CV learning feature (VCHG_CV_LRN) refines the initial charge CV value defined by the user. This smart adjustment compensates for when the charge CV deviates from its nominal settings, such as production tolerances to the charging system. Charge CV smart adjustments are applied in subsequent charge cycles following the cycle in which the learning occurred.

Discharge Average Current

The discharge average current learning (IDIS_AVG_LRN) feature calculates the load average discharge current to accurately provide the time-to-empty estimate.

Discharge Termination Current

The discharge termination current learning (IDIS_END_LRN) feature refines the initial discharge termination current value defined by the user. This value adapts to load dynamics and keeps the SOC accurate with minimal user tuning.

In addition, this feature includes two different operation modes depending on the application requirements: continuous and past-cycle

learning. In continuous learning mode, the discharge termination current updates continuously while the pack discharges to accurately determine the empty SOC. Past-cycle learning uses the previous discharge cycle data to learn. Continuous learning is recommended for unpredictable discharge termination currents, whereas past-cycle learning is recommended for consistent discharge termination currents.

State-of-Health (SOH)

As battery cells age, their total capacity decreases due to unwanted side reactions and structural deterioration (often referred to as capacity fading). Up-to-date state-of-health (SOH) information is important since it has a major impact on the battery pack's available energy.

The MPF42791 incorporates an SOH learning (SOH_LRN) feature that can track individual cells' capacities (SOH_CELLx) with respect to their nominal capacity. This feature can identify cells that are negatively impacting the overall pack performance.

Equivalent Series Resistance (ESR)

As battery cells age, their equivalent series resistance (ESR) increases due to unwanted side reactions and structural deterioration (often referred to as power fading). Up-to-date ESR information is important since it has a major impact on the battery pack's available power and SOC estimates.

The MPF42791 incorporates an ESR learning (RESR_LRN) feature that tracks individual cells' ESR (RESR_CELL_DIS_x) with respect to their characterized value. This feature can identify cells that are negatively impacting the overall pack performance.

LIFETIME LOG SOC

Important events and certain conditions are reported in the lifetime log to gain insight on how the battery pack has been operating. The MPF42791 backs the relevant registers up to its non-volatile memory (NVM) every time the part enters disabled mode (or for each elapsed hour).

Count Log

The count log is the number of times the pack has been charged from below 15% to above 85%. The number of times the pack has been charged by 10% and the number of shutdowns are also reported in the lifetime log. Full shutdowns and entering disabled mode are considered shutdowns, and increase the counter.

Current Log

The current log is the maximum charge and discharge current that has been applied to the pack. It is reported in the lifetime log.

Voltage Log

The voltage log tracks the maximum and minimum voltage for each cell. This is reported in the lifetime log. In addition, the maximum cell voltage difference between two cells is also reported, as well as their corresponding cell IDs.

Temperature Log

The temperature log tracks the maximum and minimum temperature sensed on the pack. It also reports the maximum temperature difference between two sensors, and their corresponding temperature sensor IDs.

The lifetime log details how much time the pack has operated under different temperature ranges.


Balancing Log

The balancing log tracks the number of times each cell has been balanced.

PCB Layout Guidelines


Place the bypass capacitor between each pair of VDD and GND pins, and as close as possible to the pin.

TYPICAL APPLICATION CIRCUIT

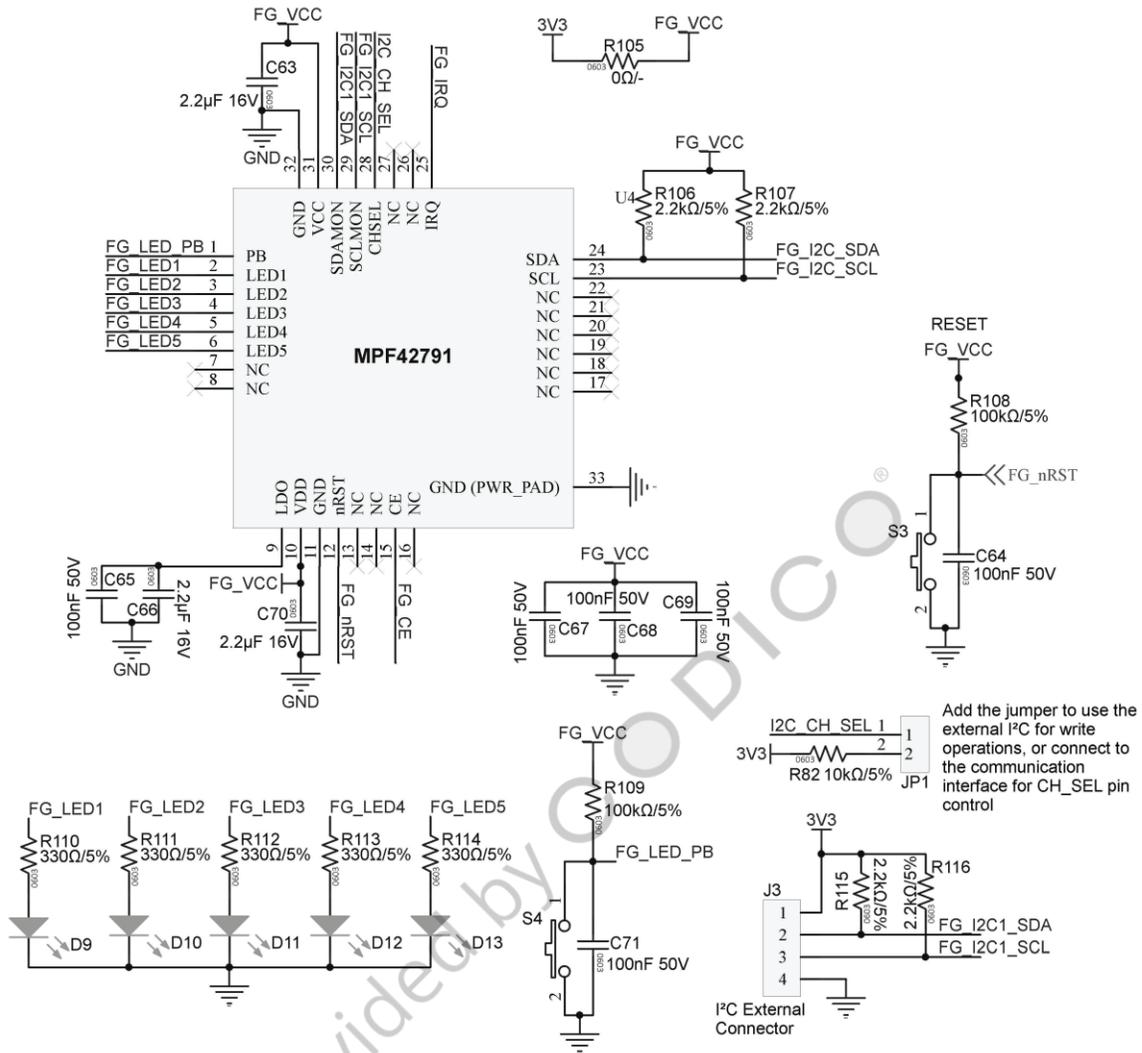


PACKAGE INFORMATION


TQFN-32 (4mmx4mm)

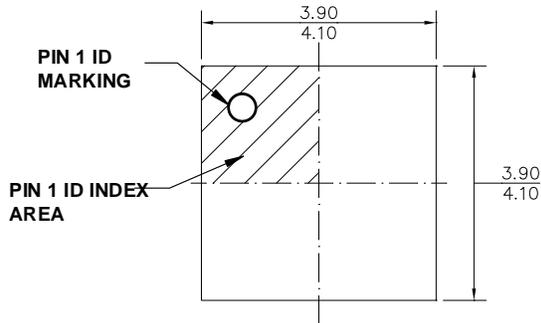


TOP VIEW

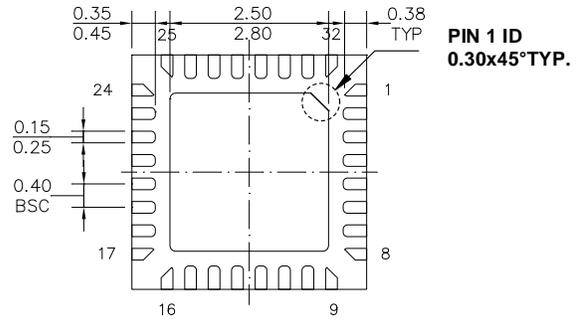

BOTTOM VIEW

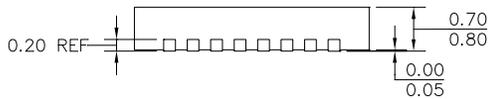

SIDE VIEW

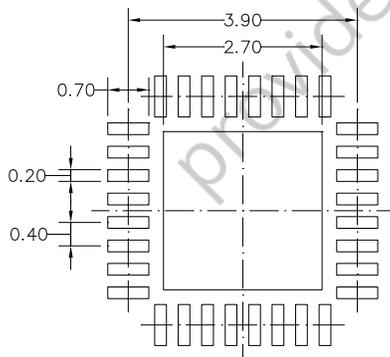


RECOMMENDED LAND PATTERN

NOTE:

- 1) ALL DIMENSIONS ARE IN MILLIMETERS.
- 2) EXPOSED PADDLE SIZE DOES NOT INCLUDE MOLD FLASH.
- 3) LEAD COPLANARITY SHALL BE 0.08 MILLIMETERS MAX.
- 4) JEDEC REFERENCE IS MO-220.
- 5) DRAWING IS NOT TO SCALE.

CARRIER INFORMATION

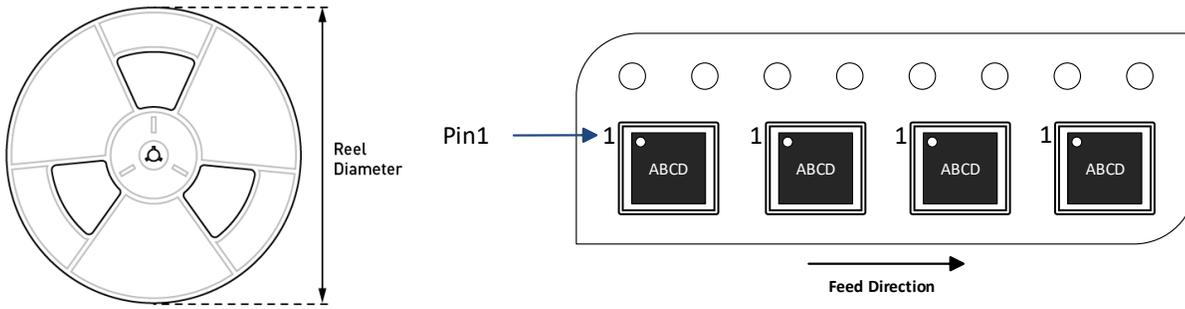

Part Number	Package Description	Quantity/ Reel	Quantity/ Tube	Quantity/ Tray	Reel Diameter	Carrier Tape Width	Carrier Tape Pitch
MPF42791DRT-0B- yyyy-Z	TQFN-32 (4mmx4mm)	5000	N/A	N/A	13in	12mm	8mm

provided by CODICO

REVISION HISTORY

Revision #	Revision Date	Description	Pages Updated
1.0	9/19/2022	Initial Release	-

provided by CODICO®

Notice: The information in this document is subject to change without notice. Please contact MPS for current specifications. Users should warrant and guarantee that third-party Intellectual Property rights are not infringed upon when integrating MPS products into any application. MPS will not assume any legal responsibility for any said applications.